

# Shop Manual

WHEEL LOADER

**WA200 -6**

**WA200PZ-6**

SERIAL NUMBERS

WA200- 70001

WA200PZ- 70001

and up

**ecot3**

**KOMATSU**



# WHEEL LOADER

## WA200-6

## WA200PZ-6

Machine model      Serial number

WA200-6              70001 and up  
WA200PZ-6          70001 and up

---

## 00 Index and foreword

### 100 Index

---

---

Composition of shop manual.....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN03862-10
00 Index and foreword	SEN03863-10
100 Index	SEN03871-10
200 Foreword and general information	SEN03872-01
01 Specification	SEN03864-00
100 Specification and technical data	SEN03873-00
10 Structure, function and maintenance standard	SEN03865-03
100 Engine and cooling system	SEN03874-00
200 Power train	SEN03875-00
300 Steering system	SEN03876-01
400 Brake system	SEN03877-00
500 Undercarriage and frame	SEN03878-01
600 Hydraulic system	SEN03879-00
700 Work equipment	SEN03880-02
800 Cab and its attachments	SEN03881-00
910 Electrical system, Part 1	SEN03882-00
920 Electrical system, Part 2	SEN03883-00
20 Standard value table	SEN03866-01
100 Standard service value table	SEN03884-01
30 Testing and adjusting	SEN03867-04
110 Testing and adjusting, Part 1	SEN03885-02
120 Testing and adjusting, Part 2	SEN03886-03
130 Testing and adjusting, Part 3	SEN03887-02
40 Troubleshooting	SEN03868-02
100 Failure code table and fuse locations	SEN03888-01
200 General information on troubleshooting	SEN03889-01
310 Troubleshooting by failure code (Display of code), Part 1	SEN03890-01
320 Troubleshooting by failure code (Display of code), Part 2	SEN03891-01
330 Troubleshooting by failure code (Display of code), Part 3	SEN03892-01
340 Troubleshooting by failure code (Display of code), Part 4	SEN03893-01
350 Troubleshooting by failure code (Display of code), Part 5	SEN03894-01
360 Troubleshooting by failure code (Display of code), Part 6	SEN03895-01
370 Troubleshooting by failure code (Display of code), Part 7	SEN03896-00
400 Troubleshooting of electrical system (E-mode)	SEN03897-02
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03898-01
600 Troubleshooting of engine (S-mode)	SEN03899-01

---

50 Disassembly and assembly	SEN03869-05
100 General information on disassembly and assembly	SEN03900-03
200 Engine and cooling system	SEN03901-01
310 Power train, Part 1	SEN03902-01
320 Power train, Part 2	SEN03903-01
400 Undercarriage and frame	SEN03904-02
500 Hydraulic system	SEN03905-02
600 Work equipment	SEN03906-00
700 Cab and its attachments	SEN03907-00
800 Electrical system	SEN03908-00
90 Diagrams and drawings	SEN03870-01
100 Hydraulic diagrams and drawings	SEN03909-00
200 Electrical diagrams and drawings	SEN03910-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$