

# Shop Manual

WHEEL LOADER

**WA200 -6**

**WA200PZ-6**

SERIAL NUMBERS

WA200- 70001

WA200PZ- 70001

and up

**ecot3**

**KOMATSU**



# WHEEL LOADER

## WA200-6

## WA200PZ-6

Machine model	Serial number
WA200-6	70001 and up
WA200PZ-6	70001 and up

---

## 00 Index and foreword

### 100 Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs .....	SEN05282-06
00 Index and foreword .....	SEN05283-06
100 Index .....	SEN05291-06 ●
200 Foreword and general information .....	SEN05292-00
01 Specification .....	SEN05284-00
100 Specification and technical data.....	SEN05293-00
10 Structure, function and maintenance standard.....	SEN05285-03
100 Engine and cooling system .....	SEN05294-01
200 Power train.....	SEN05295-00
300 Steering system .....	SEN05296-00
400 Brake system .....	SEN05297-00
500 Undercarriage and frame .....	SEN05298-00
600 Hydraulic system.....	SEN05299-00
700 Work equipment.....	SEN05300-00
800 Cab and its attachments .....	SEN05301-00
901 Electrical system, Part 1 .....	SEN05302-02 ●
902 Electrical system, Part 2 .....	SEN05303-00
20 Standard value table.....	SEN05286-00
100 Standard service value table.....	SEN05304-00
30 Testing and adjusting .....	SEN05287-05
101 Testing and adjusting, Part 1.....	SEN05305-01
102 Testing and adjusting, Part 2.....	SEN05306-03 ●
103 Testing and adjusting, Part 3.....	SEN05307-02
40 Troubleshooting.....	SEN05288-01
100 Failure code table and fuse locations .....	SEN05308-01 ●
200 General information on troubleshooting.....	SEN05309-01 ●
301 Troubleshooting by failure code (Display of code), Part 1 .....	SEN05310-00
302 Troubleshooting by failure code (Display of code), Part 2 .....	SEN05311-00
303 Troubleshooting by failure code (Display of code), Part 3 .....	SEN05312-00
304 Troubleshooting by failure code (Display of code), Part 4 .....	SEN05313-00
305 Troubleshooting by failure code (Display of code), Part 5 .....	SEN05314-00

306	Troubleshooting by failure code (Display of code), Part 6.....	SEN05315-00
307	Troubleshooting by failure code (Display of code), Part 7.....	SEN05316-00
400	Troubleshooting of electrical system (E-mode) .....	SEN05317-01 ●
500	Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN05318-00
600	Troubleshooting of engine (S-mode) .....	SEN05319-00
50	Disassembly and assembly .....	SEN05289-02
100	General information on disassembly and assembly.....	SEN05320-00
200	Engine and cooling system .....	SEN05321-00
301	Power train, Part 1.....	SEN05322-01 ●
302	Power train, Part 2.....	SEN05323-00
400	Undercarriage and frame .....	SEN05324-01
500	Hydraulic system .....	SEN05325-00
600	Work equipment .....	SEN05326-00
700	Cab and its attachments.....	SEN05327-00
800	Electrical system .....	SEN05328-00
90	Diagrams and drawings.....	SEN05290-01
100	Hydraulic diagrams and drawings .....	SEN05329-00
200	Electrical diagrams and drawings.....	SEN05330-01 ●

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$