

Shop Manual

WHEEL LOADER

WA200 -6
WA200PZ-6

SERIAL NUMBERS

WA200- 70001
WA200PZ- 70001 and up

ccot3

KOMATSU

WHEEL LOADER**WA200-6****WA200PZ-6****Machine model Serial number****WA200-6 70001 and up****WA200PZ-6 70001 and up**

00 Index and foreword**100 Index**

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN05282-11
00 Index and foreword	SEN05283-11
100 Index	SEN05291-11
200 Foreword and general information	SEN05292-01
01 Specification	SEN05284-00
100 Specification and technical data.....	SEN05293-00
10 Structure, function and maintenance standard.....	SEN05285-05
100 Engine and cooling system	SEN05294-01
200 Power train.....	SEN05295-00
300 Steering system	SEN05296-01
400 Brake system	SEN05297-00
500 Undercarriage and frame	SEN05298-01
600 Hydraulic system.....	SEN05299-00
700 Work equipment.....	SEN05300-01
800 Cab and its attachments	SEN05301-00
901 Electrical system, Part 1	SEN05302-02
902 Electrical system, Part 2	SEN05303-00
20 Standard value table.....	SEN05286-00
100 Standard service value table	SEN05304-00
30 Testing and adjusting	SEN05287-06
101 Testing and adjusting, Part 1.....	SEN05305-02
102 Testing and adjusting, Part 2.....	SEN05306-03
103 Testing and adjusting, Part 3.....	SEN05307-02
40 Troubleshooting.....	SEN05288-02
100 Failure code table and fuse locations	SEN05308-02
200 General information on troubleshooting.....	SEN05309-01
301 Troubleshooting by failure code (Display of code), Part 1	SEN05310-00
302 Troubleshooting by failure code (Display of code), Part 2	SEN05311-00
303 Troubleshooting by failure code (Display of code), Part 3	SEN05312-00
304 Troubleshooting by failure code (Display of code), Part 4	SEN05313-00
305 Troubleshooting by failure code (Display of code), Part 5	SEN05314-00
306 Troubleshooting by failure code (Display of code), Part 6	SEN05315-00
307 Troubleshooting by failure code (Display of code), Part 7	SEN05316-00
400 Troubleshooting of electrical system (E-mode).....	SEN05317-01
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN05318-00
600 Troubleshooting of engine (S-mode).....	SEN05319-00
50 Disassembly and assembly.....	SEN05289-07
100 General information on disassembly and assembly	SEN05320-02
200 Engine and cooling system	SEN05321-01

301 Power train, Part 1.....	SEN05322-02
302 Power train, Part 2.....	SEN05323-02
400 Undercarriage and frame	SEN05324-03
500 Hydraulic system.....	SEN05325-03
600 Work equipment	SEN05326-00
700 Cab and its attachments.....	SEN05327-01
800 Electrical system	SEN05328-01
90 Diagrams and drawings.....	SEN05290-01
100 Hydraulic diagrams and drawings	SEN05329-00
200 Electrical diagrams and drawings.....	SEN05330-01

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$