

# Shop Manual

WHEEL LOADER

**WA250 -6**

**WA250PZ-6**

SERIAL NUMBERS

WA250- 75001

WA250PZ- 75001

and up

**ecot3**

**KOMATSU**



# WHEEL LOADER

## WA250-6

## WA250PZ-6

Machine model      Serial number

WA250-6              75001 and up  
WA250PZ-6          75001 and up

---

## 00 Index and foreword

### 100 Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN03813-08
00 Index and foreword	SEN03814-08
100 Index	SEN03822-08
200 Foreword and general information	SEN03823-02
01 Specification	SEN03815-00
100 Specification and technical data	SEN03824-00
10 Structure, function and maintenance standard	SEN03816-01
100 Engine and cooling system	SEN03825-00
200 Power train	SEN03826-00
300 Steering system	SEN03827-01
400 Brake system	SEN03828-00
500 Undercarriage and frame	SEN03829-00
600 Hydraulic system	SEN03830-00
700 Work equipment	SEN03831-00
800 Cab and its attachments	SEN03832-00
910 Electrical system, Part 1	SEN03833-01
920 Electrical system, Part 2	SEN03834-01
20 Standard value table	SEN03817-00
100 Standard service value table	SEN03835-00
30 Testing and adjusting	SEN03818-04
110 Testing and adjusting, Part 1	SEN03836-02
120 Testing and adjusting, Part 2	SEN03837-02
130 Testing and adjusting, Part 3	SEN03838-01
40 Troubleshooting	SEN03819-01
100 Failure code table and fuse locations	SEN03839-00
200 General information on troubleshooting	SEN03840-01
310 Troubleshooting by failure code (Display of code), Part 1	SEN03841-00
320 Troubleshooting by failure code (Display of code), Part 2	SEN03842-00
330 Troubleshooting by failure code (Display of code), Part 3	SEN03843-00
340 Troubleshooting by failure code (Display of code), Part 4	SEN03844-00
350 Troubleshooting by failure code (Display of code), Part 5	SEN03845-00
360 Troubleshooting by failure code (Display of code), Part 6	SEN03846-00
370 Troubleshooting by failure code (Display of code), Part 7	SEN03847-00
400 Troubleshooting of electrical system (E-mode)	SEN03848-00
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03849-00
600 Troubleshooting of engine (S-mode)	SEN03850-00

---

50 Disassembly and assembly	SEN03820-04
100 General information on disassembly and assembly	SEN03851-03
200 Engine and cooling system	SEN03852-00
310 Power train, Part 1	SEN03853-01
320 Power train, Part 2	SEN03854-00
400 Undercarriage and frame	SEN03855-00
500 Hydraulic system	SEN03856-01
600 Work equipment	SEN03857-01
700 Cab and its attachments	SEN03858-00
800 Electrical system	SEN03859-00
90 Diagrams and drawings	SEN03821-01
100 Hydraulic diagrams and drawings	SEN03860-01
200 Electrical diagrams and drawings	SEN03861-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$