

Shop Manual

WHEEL LOADER

WA250 -6

WA250PZ-6

SERIAL NUMBERS

WA250- 75001

WA250PZ- 75001

and up

ecot3

KOMATSU

WHEEL LOADER

WA250-6

WA250PZ-6

Machine model Serial number

WA250-6 75001 and up
WA250PZ-6 75001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN03979-08
00 Index and foreword	SEN03980-08
100 Index	SEN03988-08
200 Foreword and general information	SEN03989-02
01 Specification	SEN03981-01
100 Specification and technical data	SEN03990-01
10 Structure, function and maintenance standard	SEN03982-04
100 Engine and cooling system	SEN03991-01
200 Power train	SEN03992-01
300 Steering system	SEN03993-00
400 Brake system	SEN03994-00
500 Undercarriage and frame	SEN03995-00
600 Hydraulic system	SEN03996-00
700 Work equipment	SEN03997-01
800 Cab and its attachments	SEN03998-00
910 Electrical system, Part 1	SEN03999-02
920 Electrical system, Part 2	SEN04000-02
20 Standard value table	SEN03983-01
100 Standard service value table	SEN04001-01
30 Testing and adjusting	SEN03984-06
110 Testing and adjusting, Part 1	SEN04002-03
120 Testing and adjusting, Part 2	SEN04003-04
130 Testing and adjusting, Part 3	SEN04004-02
40 Troubleshooting	SEN03985-04
100 Failure code table and fuse locations	SEN04005-04
200 General information on troubleshooting	SEN04006-02
310 Troubleshooting by failure code (Display of code), Part 1	SEN04007-01
320 Troubleshooting by failure code (Display of code), Part 2	SEN04008-01
330 Troubleshooting by failure code (Display of code), Part 3	SEN04009-02
340 Troubleshooting by failure code (Display of code), Part 4	SEN04010-01
350 Troubleshooting by failure code (Display of code), Part 5	SEN04011-01
360 Troubleshooting by failure code (Display of code), Part 6	SEN04012-01
370 Troubleshooting by failure code (Display of code), Part 7	SEN04013-00
400 Troubleshooting of electrical system (E-mode)	SEN04014-02
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04015-01
600 Troubleshooting of engine (S-mode)	SEN04016-01

50 Disassembly and assembly	SEN03986-05
100 General information on disassembly and assembly	SEN04017-03
200 Engine and cooling system	SEN04018-02
310 Power train, Part 1	SEN04019-01
320 Power train, Part 2	SEN04020-00
400 Undercarriage and frame	SEN04021-00
500 Hydraulic system	SEN04022-02
600 Work equipment	SEN04023-00
700 Cab and its attachments	SEN04024-00
800 Electrical system	SEN04025-00
90 Diagrams and drawings	SEN03987-02
100 Hydraulic diagrams and drawings	SEN04026-01
200 Electrical diagrams and drawings	SEN04027-02

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$