

Shop Manual

WHEEL LOADER

WA320 -6

WA320PZ-6

SERIAL NUMBERS

WA320- 70001

WA320PZ- 70001

and up

ecot3

KOMATSU

WHEEL LOADER

WA320-6

WA320PZ-6

(KA SPEC.)

Machine model	Serial number
WA320-6	70001 and up
WA320PZ-6 (KA SPEC.)	70001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN03911-11
00 Index and foreword	SEN03912-11
100 Index	SEN03920-11 ●
200 Foreword and general information	SEN03921-01
01 Specification	SEN03913-01
100 Specification and technical data.....	SEN03922-01
10 Structure, function and maintenance standard.....	SEN03914-03
100 Engine and cooling system	SEN03923-01
200 Power train.....	SEN03924-01
300 Steering system	SEN03925-01
400 Brake system	SEN03926-00
500 Undercarriage and frame	SEN03927-01
600 Hydraulic system.....	SEN03928-00
700 Work equipment.....	SEN03929-01
800 Cab and its attachments	SEN03930-00
910 Electrical system, Part 1	SEN03931-01
920 Electrical system, Part 2	SEN03932-02
20 Standard value table.....	SEN03915-00
100 Standard service value table	SEN03933-00
30 Testing and adjusting	SEN03916-05
110 Testing and adjusting, Part 1.....	SEN03934-03
120 Testing and adjusting, Part 2.....	SEN03935-04
130 Testing and adjusting, Part 3.....	SEN03936-02
40 Troubleshooting.....	SEN03917-02
100 Failure code table and fuse locations	SEN03937-01
200 General information on troubleshooting.....	SEN03938-02
310 Troubleshooting by failure code (Display of code), Part 1	SEN03939-00
320 Troubleshooting by failure code (Display of code), Part 2	SEN03940-00
330 Troubleshooting by failure code (Display of code), Part 3	SEN03941-01
340 Troubleshooting by failure code (Display of code), Part 4	SEN03942-01

350	Troubleshooting by failure code (Display of code), Part 5.....	SEN03943-01
360	Troubleshooting by failure code (Display of code), Part 6.....	SEN03944-01
370	Troubleshooting by failure code (Display of code), Part 7.....	SEN03945-00
400	Troubleshooting of electrical system (E-mode)	SEN03946-01
500	Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN03947-01
600	Troubleshooting of engine (S-mode)	SEN03948-01
50	Disassembly and assembly	SEN03918-08
100	General information on disassembly and assembly.....	SEN03949-02
200	Engine and cooling system	SEN03950-05
310	Power train, Part 1.....	SEN03951-04
320	Power train, Part 2.....	SEN03952-04 ●
400	Undercarriage and frame	SEN03953-04
500	Hydraulic system	SEN03954-03
600	Work equipment	SEN03955-02
700	Cab and its attachments.....	SEN03956-03
800	Electrical system	SEN03957-03
90	Diagrams and drawings.....	SEN03919-01
100	Hydraulic diagrams and drawings	SEN03958-01
200	Electrical diagrams and drawings.....	SEN03959-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$