

# Shop Manual

WHEEL LOADER

**WA320 -6**

**WA320PZ-6**

SERIAL NUMBERS

WA320- 70001

WA320PZ- 70001

and up

**ecot3**

**KOMATSU**



# WHEEL LOADER

## WA320-6

## WA320PZ-6

Machine model	Serial number
WA320-6	70001 and up
WA320PZ-6	70001 and up

---

## 00 Index and foreword

### 100 Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs .....	SEN04162-16
00 Index and foreword .....	SEN04163-16
100 Index .....	SEN04171-16 ●
200 Foreword and general information .....	SEN04172-01
01 Specification .....	SEN04164-02
100 Specification and technical data.....	SEN04173-02
10 Structure, function and maintenance standard.....	SEN04165-06
100 Engine and cooling system .....	SEN04174-01
200 Power train.....	SEN04175-01
300 Steering system .....	SEN04176-01
400 Brake system .....	SEN04177-00
500 Undercarriage and frame .....	SEN04178-01
600 Hydraulic system.....	SEN04179-00
700 Work equipment.....	SEN04180-02
800 Cab and its attachments .....	SEN04181-00
910 Electrical system, Part 1 .....	SEN04182-04
920 Electrical system, Part 2 .....	SEN04183-03
20 Standard value table.....	SEN04166-00
100 Standard service value table .....	SEN04184-00
30 Testing and adjusting .....	SEN04167-08
110 Testing and adjusting, Part 1.....	SEN04185-05
120 Testing and adjusting, Part 2.....	SEN04186-06
130 Testing and adjusting, Part 3.....	SEN04187-03
40 Troubleshooting.....	SEN04168-05
100 Failure code table and fuse locations .....	SEN04188-03
200 General information on troubleshooting.....	SEN04189-03
310 Troubleshooting by failure code (Display of code), Part 1 .....	SEN04190-00
320 Troubleshooting by failure code (Display of code), Part 2 .....	SEN04191-00
330 Troubleshooting by failure code (Display of code), Part 3 .....	SEN04192-02
340 Troubleshooting by failure code (Display of code), Part 4 .....	SEN04193-01

350	Troubleshooting by failure code (Display of code), Part 5.....	SEN04194-01
360	Troubleshooting by failure code (Display of code), Part 6.....	SEN04195-01
370	Troubleshooting by failure code (Display of code), Part 7.....	SEN04196-00
400	Troubleshooting of electrical system (E-mode) .....	SEN04197-02
500	Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN04198-01
600	Troubleshooting of engine (S-mode) .....	SEN04199-01
50	Disassembly and assembly .....	SEN04169-10
100	General information on disassembly and assembly.....	SEN04200-02
200	Engine and cooling system .....	SEN04201-06
310	Power train, Part 1.....	SEN04202-04
320	Power train, Part 2.....	SEN04203-04 ●
400	Undercarriage and frame .....	SEN04204-04
500	Hydraulic system .....	SEN04205-03
600	Work equipment .....	SEN04206-02
700	Cab and its attachments.....	SEN04207-04
800	Electrical system .....	SEN04208-03
90	Diagrams and drawings .....	SEN04170-04
100	Hydraulic diagrams and drawings .....	SEN04209-01
200	Electrical diagrams and drawings.....	SEN04210-04

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$