

Shop Manual

WHEEL LOADER

WA380 -6

WA380Z-6

SERIAL NUMBERS

WA380- 65001

WA380Z-66446

and up

ecot3

KOMATSU

WHEEL LOADER

WA380-6

WA380Z-6

Machine model	Serial number
WA380-6	65001 and up
WA380Z-6	66446 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents.....	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN05717-01
00 Index and foreword	SEN05718-01
Index	SEN05719-01 ●
Foreword and general information	SEN05720-00
01 Specification	SEN05721-00
Specification and technical data	SEN05722-00
10 Structure, function and maintenance standard	SEN05723-00
Engine and cooling system	SEN05724-00
Power train	SEN05725-00
Steering system	SEN05726-00
Brake system	SEN05727-00
Undercarriage and frame	SEN05728-00
Hydraulic system, Part 1	SEN05729-00
Hydraulic system, Part 2	SEN05730-00
Work equipment	SEN05731-00
Cab and its attachments	SEN05732-00
Electrical system, Part 1	SEN05733-00
Electrical system, Part 2	SEN05734-00
Electrical system, Part 3	SEN05735-00
20 Standard value table	SEN05736-00
Standard service value table	SEN05737-00
30 Testing and adjusting	SEN05738-00
Testing and adjusting, Part 1	SEN05739-00
Testing and adjusting, Part 2	SEN05740-00
Testing and adjusting, Part 3	SEN05741-00
40 Troubleshooting	SEN05742-00
Failure code table and fuse locations	SEN05743-00
General information on troubleshooting	SEN05744-00
Troubleshooting by failure code (Display of code), Part 1	SEN05745-00
Troubleshooting by failure code (Display of code), Part 2	SEN05746-00
Troubleshooting by failure code (Display of code), Part 3	SEN05747-00

Troubleshooting by failure code (Display of code), Part 4	SEN05748-00
Troubleshooting by failure code (Display of code), Part 5	SEN05749-00
Troubleshooting by failure code (Display of code), Part 6	SEN05750-00
Troubleshooting by failure code (Display of code), Part 7	SEN05751-00
Troubleshooting by failure code (Display of code), Part 8	SEN05752-00
Troubleshooting by failure code (Display of code), Part 9	SEN05753-00
Troubleshooting by failure code (Display of code), Part 10	SEN05754-00
Troubleshooting of electrical system (E-mode)	SEN05755-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN05756-00
Troubleshooting of engine (S-mode)	SEN05757-00
50 Disassembly and assembly	SEN05758-00
General information on disassembly and assembly	SEN05759-00 ○
Engine and cooling system	SEN05760-00 ○
Power train	SEN05761-00 ○
Steering system	SEN05762-00 ○
Brake system	SEN05763-00 ○
Undercarriage and frame	SEN05764-00 ○
Hydraulic system	SEN05765-00 ○
Work equipment	SEN05766-00 ○
Cab and its attachments	SEN05767-00 ○
Electrical system	SEN05768-00 ○
90 Diagrams and drawings	SEN05769-00
Hydraulic diagrams and drawings	SEN05770-00
Electrical diagrams and drawings	SEN05771-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$