

Shop Manual

WHEEL LOADER

WA380-6

SERIAL NUMBERS H60051 and up

ecot3

WHEEL LOADER

WA380-6

| Machine model | Serial number |
|----------------------|----------------------|
| WA380-6 | H60051 and up |

00 Index and foreword

Index

| | |
|----------------------------------|---|
| Composition of shop manual | 2 |
| Table of contents | 4 |

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

| Section Title | Form Number |
|---|-------------|
| Shop Manual | VEBM440102 |
| 00 Index and foreword | |
| Index | SEN00123-15 |
| Foreword and general information | SEN00124-04 |
| 01 Specification | |
| Specification and technical data | SEN00125-03 |
| 10 Structure, function and maintenance standard | |
| Engine and cooling system | SEN01028-03 |
| Power train | SEN01029-02 |
| Steering system | SEN01030-03 |
| Brake system | SEN01031-04 |
| Undercarriage and frame | SEN01032-01 |
| Hydraulic system, Part 1 | SEN01033-04 |
| Hydraulic system, Part 2 | SEN01034-02 |
| Work equipment | SEN01035-02 |
| Cab and its attachments | SEN01036-04 |
| Electrical system, Part 1 | SEN01037-02 |
| Electrical system, Part 2 | SEN01038-03 |
| Electrical system, Part 3 | SEN01039-03 |
| Central Lubrication System (CLS) | CLS10-01 |
| 20 Standard value table | |
| Standard service value table | SEN01244-01 |
| 30 Testing and adjusting | |
| Testing and adjusting, Part 1 | SEN01245-02 |
| Testing and adjusting, Part 2 | SEN01246-03 |
| Testing and adjusting, Part 3 | SEN01247-04 |
| 40 Troubleshooting | |
| Failure code table and fuse locations | SEN03961-04 |
| General information on troubleshooting | SEN01261-02 |
| Troubleshooting by failure code (Display of code), Part 1 | SEN01248-04 |

| | |
|---|-------------|
| Troubleshooting by failure code (Display of code), Part 2 | SEN01249-03 |
| Troubleshooting by failure code (Display of code), Part 3 | SEN01250-05 |
| Troubleshooting by failure code (Display of code), Part 4 | SEN01251-02 |
| Troubleshooting by failure code (Display of code), Part 5 | SEN01252-03 |
| Troubleshooting by failure code (Display of code), Part 6 | SEN01253-05 |
| Troubleshooting by failure code (Display of code), Part 7 | SEN01254-01 |
| Troubleshooting by failure code (Display of code), Part 8 | SEN01255-03 |
| Troubleshooting by failure code (Display of code), Part 9 | SEN01256-02 |
| Troubleshooting by failure code (Display of code), Part 10 | SEN01257-02 |
| Troubleshooting of electrical system (E-mode) | SEN01258-03 |
| Troubleshooting of hydraulic and mechanical system (H-mode) | SEN01259-03 |
| Troubleshooting of engine (S-mode) | SEN01260-02 |
| Troubleshooting of Central Lubrication System (CLS) | CLS40-01 |
| 50 Disassembly and assembly | |
| General information on disassembly and assembly | SEN01451-03 |
| Engine and cooling system | SEN01452-03 |
| Power train | SEN01453-03 |
| Steering system | SEN01454-02 |
| Brake system | SEN01455-03 |
| Undercarriage and frame | SEN01456-01 |
| Hydraulic system | SEN01457-01 |
| Work equipment | SEN01458-01 |
| Cab and its attachments | SEN01459-03 |
| Electrical system | SEN01460-01 |
| 90 Diagrams and drawings | |
| Hydraulic diagrams and drawings | SEN00126-01 |
| Electrical diagrams and drawings | SEN00127-04 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$