

# Shop Manual

WHEEL LOADER

**WA380-8**

SERIAL NUMBERS 15001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-25
Foreword, Safety, Basic Information .....	00-31
How to Read the Shop Manual .....	00-31
Safety Notice for Operation .....	00-33
Precautions to Prevent Fire .....	00-41
Procedures If Fire Occurs .....	00-43
Precautions for Disposing of Waste Materials .....	00-44
Procedures for Exhaust Gas Regulations .....	00-45
Precautions for DEF .....	00-46
Store DEF .....	00-47
Precautions When You Handle Hydraulic Equipment .....	00-48
Precautions When You Disconnect and Connect Pipings .....	00-51
Precautions When You Handle Electrical Equipment .....	00-58
Precautions When You Handle Fuel System Equipment .....	00-60
Precautions When You Handle Intake System Equipment .....	00-61
Practical Use of KOMTRAX .....	00-62
Disconnect and Connect Push-Pull Type Coupler .....	00-63
Precautions for Disconnection and Connection of Connectors .....	00-67
How to Disconnect and Connect Deutsch Connector .....	00-71
How to Disconnect and Connect Slide Lock Type Connector .....	00-72
How to Disconnect and Connect Connector with Lock to Pull .....	00-74
How to Disconnect and Connect Connector with Lock to Push .....	00-75
How to Disconnect and Connect Connector with Housing to Rotate .....	00-77
How to Read the Codes for Electric Cable .....	00-78
Explanation of Terms for Maintenance Standard .....	00-82
Standard Tightening Torque Table .....	00-85
Conversion Table .....	00-92
01 Specifications .....	01-1
Table of Contents .....	01-2
Abbreviation List .....	01-3
Specifications .....	01-9
Specification Drawing .....	01-9
Specifications .....	01-11
Weight Table .....	01-16
Table of Fuel, Coolant, and Lubricants .....	01-18
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Abbreviation List .....	10-7
Urea SCR System .....	10-13
Layout Drawing of Urea SCR System .....	10-13
Urea SCR System Diagram .....	10-17
Function of Urea SCR System .....	10-18
Component Parts of Urea SCR System .....	10-35
Boot-up System .....	10-44
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal) .....	10-44
Layout Drawing of Boot-up System (Machine with Gateway Function Controller) .....	10-45
System Operating Lamp System .....	10-46
Battery Disconnect Switch .....	10-49
Preheating System .....	10-51
Engine System .....	10-53
Layout Drawing of Engine System .....	10-53
Engine Control System .....	10-55
Engine Power Mode Selector System .....	10-62
Automatic Idle Stop System .....	10-64
Component Parts of Engine System .....	10-65

Cooling System.....	10-84
Layout Drawing of Cooling System .....	10-84
Cooling Fan Control System .....	10-87
Component Parts of Cooling System .....	10-92
Control System .....	10-106
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-106
Layout Drawing of Control System (Machine with Gateway Function Controller) .....	10-108
Machine Monitor System.....	10-110
Rearview Monitor System .....	10-112
KOMTRAX System .....	10-113
Component Parts of Control System .....	10-115
Hydraulic System .....	10-173
Layout Drawing of Hydraulic System.....	10-173
CLSS .....	10-174
Work Equipment Pump and Steering Pump Control System .....	10-177
Component Parts of Hydraulic System.....	10-178
Power Train System.....	10-250
Layout Drawing of Power Train System .....	10-250
Operation of Power Train System .....	10-253
Transmission Control System.....	10-254
Transmission Gear Shift Control System.....	10-256
Transmission Protection Function .....	10-262
Directional Selector Switch Control Function.....	10-265
Transmission Cut-off Function.....	10-267
Component Parts of Power Train System.....	10-269
Work Equipment System.....	10-320
Layout Drawing of Work Equipment System .....	10-320
Work Equipment System Diagram (Applicable Machine: 15001 to 17004) .....	10-322
Work Equipment System Diagram (Applicable Machine: 17005 and Up) .....	10-324
Work Equipment Control System .....	10-326
Work Equipment Neutral Lock System .....	10-331
Remote Positioner System.....	10-333
Bucket Positioner and Boom Positioner .....	10-338
Auto-Digging System .....	10-339
Semi-Auto Digging System .....	10-341
ECSS .....	10-343
Component Parts of Work Equipment System .....	10-345
Steering System.....	10-353
Layout Drawing of Steering System .....	10-353
Secondary Steering System.....	10-354
Steering Column .....	10-356
Component Parts of Steering System .....	10-357
Brake System.....	10-377
Layout Drawing of Brake System .....	10-377
Parking Brake Control System .....	10-379
Brake Cooling Control System .....	10-381
Component Parts of Brake System .....	10-382
Auto-Greasing System .....	10-406
Layout Drawing of Auto-Greasing System.....	10-406
Specifications of Auto-Greasing System .....	10-407
Function of Auto-Greasing System.....	10-409
Auto-Greasing System .....	10-410
Undercarriage and Frame .....	10-411
Frame, Axle Mount and Center Hinge Pin .....	10-411
Tires.....	10-413
Work Equipment .....	10-415
Structure of Work Equipment .....	10-415
Structure of Bucket.....	10-416

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$