

# Shop Manual

WHEEL LOADER

**WA380-8EO**

SERIAL NUMBERS 15641 and up

**KOMATSU**



---

## **00 Index and Foreword**

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-25
Foreword, Safety, Basic Information.....	00-31
How to Read the Shop Manual .....	00-31
Safety Notice for Operation .....	00-33
Precautions to Prevent Fire.....	00-41
Procedures If Fire Occurs .....	00-43
Precautions for Disposing of Waste Materials .....	00-44
Procedures for Exhaust Gas Regulations.....	00-45
Precautions for DEF.....	00-46
Store DEF .....	00-47
Precautions When You Handle Hydraulic Equipment.....	00-48
Precautions When You Disconnect and Connect Pipings.....	00-51
Precautions When You Handle Electrical Equipment .....	00-58
Precautions When You Handle Fuel System Equipment .....	00-60
Precautions When You Handle Intake System Equipment .....	00-61
Practical Use of KOMTRAX .....	00-62
Disconnect and Connect Push-Pull Type Coupler .....	00-63
Precautions for Disconnection and Connection of Connectors .....	00-67
How to Disconnect and Connect Deutsch Connector .....	00-71
How to Disconnect and Connect Slide Lock Type Connector .....	00-72
How to Disconnect and Connect Connector with Lock to Pull .....	00-74
How to Disconnect and Connect Connector with Lock to Push .....	00-75
How to Disconnect and Connect Connector with Housing to Rotate .....	00-77
How to Read the Codes for Electric Cable .....	00-78
Explanation of Terms for Maintenance Standard .....	00-82
Standard Tightening Torque Table.....	00-85
Conversion Table .....	00-92
01 Specifications .....	01-1
Table of Contents .....	01-2
Abbreviation List .....	01-3
Specifications .....	01-9
Specification Drawing.....	01-9
Specifications.....	01-11
Weight Table .....	01-16
Table of Fuel, Coolant, and Lubricants .....	01-18
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Abbreviation List .....	10-7
Urea SCR System.....	10-13
Layout Drawing of Urea SCR System .....	10-13
Urea SCR System Diagram .....	10-17
Function of Urea SCR System .....	10-18
Component Parts of Urea SCR System .....	10-29
Boot-up System .....	10-38
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal) .....	10-38
Layout Drawing of Boot-up System (Machine with Gateway Function Controller) .....	10-39
System Operating Lamp System.....	10-40
Battery Disconnect Switch.....	10-43
Preheating System.....	10-45
Engine System.....	10-47
Layout Drawing of Engine System .....	10-47
Engine Control System .....	10-49
Engine Power Mode Selector System .....	10-56
Automatic Idle Stop System .....	10-58
Component Parts of Engine System .....	10-59

Cooling System.....	10-77
Layout Drawing of Cooling System .....	10-77
Cooling Fan Control System .....	10-80
Component Parts of Cooling System .....	10-85
Control System .....	10-99
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-99
Layout Drawing of Control System (Machine with Gateway Function Controller) .....	10-101
Machine Monitor System.....	10-103
Rearview Monitor System .....	10-105
KOMTRAX System .....	10-106
RDS Load Meter System .....	10-108
Component Parts of Control System .....	10-110
Hydraulic System .....	10-163
Layout Drawing of Hydraulic System.....	10-163
CLSS .....	10-164
Work Equipment Pump and Steering Pump Control System .....	10-167
Component Parts of Hydraulic System.....	10-168
Power Train System.....	10-238
Layout Drawing of Power Train System .....	10-238
Operation of Power Train System .....	10-241
Transmission Control System.....	10-242
Transmission Gear Shift Control System.....	10-244
Transmission Protection Function .....	10-250
Directional Selector Switch Control Function .....	10-253
Transmission Cut-off Function.....	10-255
Component Parts of Power Train System.....	10-257
Work Equipment System.....	10-306
Layout Drawing of Work Equipment System .....	10-306
Work Equipment System Diagram (Applicable Machine: 15641 to 17004) .....	10-308
Work Equipment System Diagram (Applicable Machine: 17005 and Up) .....	10-310
Work Equipment Control System .....	10-312
Work Equipment Neutral Lock System .....	10-317
Remote Positioner System.....	10-319
Bucket Positioner and Boom Positioner .....	10-324
Auto-Digging System .....	10-325
Semi-Auto Digging System .....	10-327
ECSS .....	10-329
Component Parts of Work Equipment System .....	10-331
Steering System.....	10-339
Layout Drawing of Steering System .....	10-339
Secondary Steering System.....	10-340
Steering Column .....	10-342
Component Parts of Steering System .....	10-343
Brake System.....	10-363
Layout Drawing of Brake System .....	10-363
Parking Brake Control System .....	10-365
Brake Cooling Control System .....	10-367
Component Parts of Brake System .....	10-368
Auto-Greasing System .....	10-391
Layout Drawing of Auto-Greasing System.....	10-391
Specifications of Auto-Greasing System .....	10-392
Function of Auto-Greasing System .....	10-394
Auto-Greasing System .....	10-395
Undercarriage and Frame .....	10-396
Frame, Axle Mount and Center Hinge Pin .....	10-396
Tires.....	10-398
Work Equipment .....	10-400
Structure of Work Equipment .....	10-400

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$