

Shop Manual

WHEEL LOADER

WA430-6

SERIAL NUMBERS 65001 and up

ecot3

KOMATSU

WHEEL LOADER

WA430-6

Machine model	Serial number
WA430-6	65001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00823-22
00 Index and foreword	SEN00824-22
Index	SEN00832-22
Foreword and general information	SEN00833-06
01 Specification	SEN00825-03
Specification and technical data	SEN00834-03
10 Structure, function and maintenance standard	SEN00826-06
Engine and cooling system	SEN01363-01
Power train	SEN01364-03
Steering system	SEN01365-02
Brake system	SEN01366-02
Undercarriage and frame	SEN01367-02
Hydraulic system, Part 1	SEN01368-03
Hydraulic system, Part 2	SEN01369-01
Work equipment	SEN01370-02
Cab and its attachments	SEN01371-02
Electrical system, Part 1	SEN01372-04
Electrical system, Part 2	SEN01373-03
Electrical system, Part 3	SEN01374-04
20 Standard value table	SEN00827-05
Standard service value table	SEN01599-05
30 Testing and adjusting	SEN00828-09
Testing and adjusting, Part 1	SEN01600-07
Testing and adjusting, Part 2	SEN01601-06
Testing and adjusting, Part 3	SEN01602-07
40 Troubleshooting	SEN00829-09
Failure code table and fuse locations	SEN01736-08
General information on troubleshooting	SEN01737-03
Troubleshooting by failure code (Display of code), Part 1	SEN01738-04
Troubleshooting by failure code (Display of code), Part 2	SEN01739-06
Troubleshooting by failure code (Display of code), Part 3	SEN01740-06
Troubleshooting by failure code (Display of code), Part 4	SEN01741-02
Troubleshooting by failure code (Display of code), Part 5	SEN01742-03
Troubleshooting by failure code (Display of code), Part 6	SEN01743-03
Troubleshooting by failure code (Display of code), Part 7	SEN01744-02
Troubleshooting by failure code (Display of code), Part 8	SEN01745-03
Troubleshooting by failure code (Display of code), Part 9	SEN01746-01
Troubleshooting by failure code (Display of code), Part 10	SEN01747-02
Troubleshooting of electrical system (E-mode)	SEN01748-04
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01749-04

Troubleshooting of engine (S-mode)	SEN01750-02
50 Disassembly and assembly	SEN00830-08
General information on disassembly and assembly	SEN02191-04
Engine and cooling system	SEN02192-04
Power train, Part 1	SEN02193-05
Power train, Part 2	SEN02194-06
Steering system	SEN02195-02
Brake system	SEN02196-03
Undercarriage and frame	SEN02197-04
Hydraulic system	SEN02198-02
Work equipment	SEN02199-05
Cab and its attachments	SEN02200-03
Electrical system	SEN02201-02
90 Diagrams and drawings	SEN00831-04
Hydraulic diagrams and drawings	SEN00835-02
Electrical diagrams and drawings	SEN00836-03

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$