

Shop Manual

WHEEL LOADER

WA470-6

WA480-6

SERIAL NUMBERS

WA470-85001 to 90000

WA480-85001 to 90000

ecot3

KOMATSU

WHEEL LOADER

WA470-6

WA480-6

Machine model Serial number

WA470-6

85001 and up

WA480-6

85001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00783-15
00 Index and foreword	SEN00785-15
Index	SEN00802-15
Foreword and general information	SEN00803-04
01 Specification	SEN00787-02
Specification and technical data	SEN00804-02
10 Structure, function and maintenance standard	SEN00796-07
Engine and cooling system	SEN01301-01
Power train	SEN01302-02
Steering system	SEN01303-03
Brake system	SEN01304-01
Undercarriage and frame	SEN01305-02
Hydraulic system, Part 1	SEN01306-03
Hydraulic system, Part 2	SEN01307-01
Work equipment	SEN01308-01
Cab and its attachments	SEN01309-02
Electrical system, Part 1	SEN01310-04
Electrical system, Part 2	SEN01311-03
Electrical system, Part 3	SEN01312-02
20 Standard value table	SEN00797-04
Standard service value table	SEN01313-04
30 Testing and adjusting	SEN00798-04
Testing and adjusting, Part 1	SEN01589-04
Testing and adjusting, Part 2	SEN01590-03
Testing and adjusting, Part 3	SEN01591-02
40 Troubleshooting	SEN00799-04
Failure code table and fuse locations	SEN01691-04
General information on troubleshooting	SEN01692-02
Troubleshooting by failure code (Display of code), Part 1	SEN01693-02
Troubleshooting by failure code (Display of code), Part 2	SEN01694-04
Troubleshooting by failure code (Display of code), Part 3	SEN01695-02
Troubleshooting by failure code (Display of code), Part 4	SEN01696-02
Troubleshooting by failure code (Display of code), Part 5	SEN01697-02
Troubleshooting by failure code (Display of code), Part 6	SEN01698-02
Troubleshooting by failure code (Display of code), Part 7	SEN01699-02
Troubleshooting by failure code (Display of code), Part 8	SEN01700-03
Troubleshooting by failure code (Display of code), Part 9	SEN01701-01
Troubleshooting by failure code (Display of code), Part 10	SEN01702-02
Troubleshooting of electrical system (E-mode)	SEN01703-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01704-02
Troubleshooting of engine (S-mode)	SEN01705-02

50 Disassembly and assembly	SEN00800-07
General information on disassembly and assembly	SEN02202-03
Engine and cooling system	SEN02203-02
Power train, Part 1	SEN02204-03
Power train, Part 2	SEN02205-05
Undercarriage and frame	SEN02206-02
Hydraulic system	SEN02207-03
Work equipment	SEN02208-01
Cab and its attachments	SEN02209-02
Electrical system	SEN02210-02
90 Diagrams and drawings	SEN00801-02
Hydraulic diagrams and drawings	SEN00805-00
Electrical diagrams and drawings	SEN00806-02

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$