

Shop Manual

WHEEL LOADER

**WA470-6
WA480-6**

SERIAL NUMBERS

WA470-90001 and up
WA480-90001

ccot3

KOMATSU

WHEEL LOADER**WA470-6****WA480-6****Machine model Serial number****WA470-6 90001 and up****WA480-6 90001 and up**

00 Index and foreword**100 Index**

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title.....	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04409-16
00 Index and foreword	SEN04410-16
100 Index	SEN04418-16
200 Foreword and general information	SEN04419-03
01 Specification	SEN04411-00
100 Specification and technical data.....	SEN04420-00
10 Structure, function and maintenance standard.....	SEN04412-06
100 Engine and cooling system	SEN04421-01
200 Power train.....	SEN04422-02
300 Steering system	SEN04423-02
400 Brake system	SEN04424-02
500 Undercarriage and frame	SEN04425-00
601 Hydraulic system, Part 1	SEN04426-01
602 Hydraulic system, Part 2	SEN04427-00
700 Work equipment.....	SEN04428-00
800 Cab and its attachments	SEN04429-01
901 Electrical system, Part 1	SEN04430-03
902 Electrical system, Part 2	SEN04431-02
903 Electrical system, Part 3	SEN04432-02
20 Standard value table.....	SEN04413-04
100 Standard service value table	SEN04515-04
30 Testing and adjusting	SEN04414-08
101 Testing and adjusting, Part 1.....	SEN04516-04
102 Testing and adjusting, Part 2.....	SEN04517-04
103 Testing and adjusting, Part 3.....	SEN04518-05
40 Troubleshooting.....	SEN04415-08
100 Failure code table and fuse locations	SEN04519-05
200 General information on troubleshooting.....	SEN04520-01
301 Troubleshooting by failure code (Display of code), Part 1	SEN04521-01
302 Troubleshooting by failure code (Display of code), Part 2	SEN04522-05
303 Troubleshooting by failure code (Display of code), Part 3	SEN04523-03
304 Troubleshooting by failure code (Display of code), Part 4	SEN04524-01
305 Troubleshooting by failure code (Display of code), Part 5	SEN04525-02
306 Troubleshooting by failure code (Display of code), Part 6	SEN04526-03
307 Troubleshooting by failure code (Display of code), Part 7	SEN04527-02
308 Troubleshooting by failure code (Display of code), Part 8	SEN04528-05
309 Troubleshooting by failure code (Display of code), Part 9	SEN04529-01
310 Troubleshooting by failure code (Display of code), Part 10	SEN04530-01
400 Troubleshooting of electrical system (E-mode).....	SEN04531-02
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04532-02

600 Troubleshooting of engine (S-mode)	SEN04533-02
50 Disassembly and assembly	SEN04416-09
100 General information on disassembly and assembly	SEN04534-04
200 Engine and cooling system	SEN04535-03
301 Power train, Part 1	SEN04536-04
302 Power train, Part 2	SEN04537-05
400 Brake system	SEN04866-02
500 Undercarriage and frame	SEN04538-02
600 Hydraulic system	SEN04539-01
700 Work equipment	SEN04540-00
800 Cab and its attachments	SEN04541-01
900 Electrical system	SEN04542-01
80 Appendix	SEN05396-01
100 Air conditioner	SEN05397-01
90 Diagrams and drawings	SEN04417-03
100 Hydraulic diagrams and drawings	SEN04433-02
200 Electrical diagrams and drawings	SEN04434-02

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$