

Shop Manual

WHEEL LOADER

WA470-8

SERIAL NUMBERS 100001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-25
Foreword, Safety, Basic Information	00-31
How to Read the Shop Manual	00-31
Safety Notice for Operation	00-33
Precautions to Prevent Fire	00-41
Procedures If Fire Occurs	00-43
Precautions for Disposing of Waste Materials	00-44
Procedures for Exhaust Gas Regulations	00-45
Precautions for DEF	00-46
Store DEF	00-47
Precautions When You Handle Hydraulic Equipment	00-48
Precautions When You Disconnect and Connect Pipings	00-51
Precautions When You Handle Electrical Equipment	00-58
Precautions When You Handle Fuel System Equipment	00-60
Precautions When You Handle Intake System Equipment	00-61
Practical Use of KOMTRAX	00-62
Disconnect and Connect Push-Pull Type Coupler	00-63
Precautions for Disconnection and Connection of Connectors	00-67
How to Disconnect and Connect Deutsch Connector	00-71
How to Disconnect and Connect Slide Lock Type Connector	00-72
How to Disconnect and Connect Connector with Lock to Pull	00-74
How to Disconnect and Connect Connector with Lock to Push	00-75
How to Disconnect and Connect Connector with Housing to Rotate	00-77
How to Read the Codes for Electric Cable	00-78
Explanation of Terms for Maintenance Standard	00-82
Standard Tightening Torque Table	00-85
Conversion Table	00-92
01 Specifications	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing	01-9
Specifications	01-11
Weight Table	01-16
Table of Fuel, Coolant, and Lubricants	01-18
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-7
Urea SCR System	10-13
Layout Drawing of Urea SCR System	10-13
Urea SCR System Diagram	10-17
Function of Urea SCR System	10-18
Component Parts of Urea SCR System	10-35
Boot-up System	10-44
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal)	10-44
Layout Drawing of Boot-up System (Machine with Gateway Function Controller)	10-46
System Operating Lamp System	10-48
Battery Disconnect Switch	10-51
Preheating System	10-53
Engine System	10-55
Layout Drawing of Engine System	10-55
Engine Control System	10-58
Engine Power Mode Selector System	10-64
Automatic Idle Stop System	10-66
Component Parts of Engine System	10-67

Cooling System.....	10-84
Layout Drawing of Cooling System	10-84
Cooling Fan Control System	10-87
Component Parts of Cooling System	10-92
Control System	10-106
Layout Drawing of Control System (Machine with KOMTRAX Terminal)	10-106
Layout Drawing of Control System (Machine with Gateway Function Controller)	10-108
Machine Monitor System.....	10-110
Rearview Monitor System	10-112
KOMTRAX System	10-113
RDS Load Meter System	10-115
Component Parts of Control System	10-117
Hydraulic System	10-175
Layout Drawing of Hydraulic System.....	10-175
CLSS	10-176
Work Equipment Pump and Steering Pump Control System	10-180
Component Parts of Hydraulic System.....	10-181
Power Train System.....	10-251
Layout Drawing of Power Train System	10-251
Operation of Power Train System	10-254
Transmission Control System.....	10-255
Transmission Gear Shift Control System.....	10-257
Transmission Protection Function	10-263
Directional Selector Switch Control Function.....	10-266
Transmission Cut-off Function.....	10-268
Component Parts of Power Train System.....	10-270
Work Equipment System.....	10-330
Layout Drawing of Work Equipment System	10-330
Work Equipment System Diagram (Applicable Machine: 100001 to 101011)	10-332
Work Equipment System Diagram (Applicable Machine: 101012 and Up)	10-334
Work Equipment Control System	10-336
Work Equipment Neutral Lock System	10-340
Remote Positioner System.....	10-342
Bucket Positioner and Boom Positioner	10-347
Auto-Digging System	10-348
Semi-Auto Digging System	10-350
ECSS	10-352
Component Parts of Work Equipment System	10-354
Steering System.....	10-362
Layout Drawing of Steering System	10-362
Secondary Steering System.....	10-363
Joystick Steering System	10-365
Steering Column	10-370
Component Parts of Steering System	10-371
Brake System.....	10-393
Layout Drawing of Brake System	10-393
Parking Brake Control System	10-399
Brake Cooling Control System	10-401
Component Parts of Brake System	10-405
Auto-Greasing System	10-439
Layout Drawing of Auto-Greasing System.....	10-439
Specifications of Auto-Greasing System	10-441
Function of Auto-Greasing System.....	10-443
Auto-Greasing System	10-444
Undercarriage and Frame	10-445
Frame, Axle Mount and Center Hinge Pin	10-445
Tires.....	10-447
Work Equipment	10-449

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$