

Shop Manual

WHEEL LOADER

WA470-8E0

SERIAL NUMBERS 100439 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-25
Foreword, Safety, Basic Information	00-31
How to Read the Shop Manual	00-31
Safety Notice for Operation	00-33
Precautions to Prevent Fire	00-41
Procedures If Fire Occurs	00-43
Precautions for Disposing of Waste Materials	00-44
Procedures for Exhaust Gas Regulations	00-45
Precautions for DEF	00-46
Store DEF	00-47
Precautions When You Handle Hydraulic Equipment	00-48
Precautions When You Disconnect and Connect Pipings	00-51
Precautions When You Handle Electrical Equipment	00-58
Precautions When You Handle Fuel System Equipment	00-60
Precautions When You Handle Intake System Equipment	00-61
Practical Use of KOMTRAX	00-62
Disconnect and Connect Push-Pull Type Coupler	00-63
Precautions for Disconnection and Connection of Connectors	00-67
How to Disconnect and Connect Deutsch Connector	00-71
How to Disconnect and Connect Slide Lock Type Connector	00-72
How to Disconnect and Connect Connector with Lock to Pull	00-74
How to Disconnect and Connect Connector with Lock to Push	00-75
How to Disconnect and Connect Connector with Housing to Rotate	00-77
How to Read the Codes for Electric Cable	00-78
Explanation of Terms for Maintenance Standard	00-82
Standard Tightening Torque Table	00-85
Conversion Table	00-92
01 Specifications	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing	01-9
Specifications	01-11
Weight Table	01-16
Table of Fuel, Coolant, and Lubricants	01-18
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-7
Urea SCR System	10-13
Layout Drawing of Urea SCR System	10-13
Urea SCR System Diagram	10-17
Function of Urea SCR System	10-18
Component Parts of Urea SCR System	10-29
Boot-up System	10-38
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal)	10-38
Layout Drawing of Boot-up System (Machine with Gateway Function Controller)	10-40
System Operating Lamp System	10-42
Battery Disconnect Switch	10-45
Preheating System	10-47
Engine System	10-49
Layout Drawing of Engine System	10-49
Engine Control System	10-52
Engine Power Mode Selector System	10-58
Automatic Idle Stop System	10-60
Component Parts of Engine System	10-61

Cooling System.....	10-78
Layout Drawing of Cooling System	10-78
Cooling Fan Control System	10-81
Component Parts of Cooling System	10-86
Control System	10-100
Layout Drawing of Control System (Machine with KOMTRAX Terminal)	10-100
Layout Drawing of Control System (Machine with Gateway Function Controller)	10-102
Machine Monitor System.....	10-104
Rearview Monitor System	10-106
KOMTRAX System	10-107
RDS Load Meter System	10-109
Component Parts of Control System	10-111
Hydraulic System	10-163
Layout Drawing of Hydraulic System.....	10-163
CLSS	10-164
Work Equipment Pump and Steering Pump Control System	10-168
Component Parts of Hydraulic System.....	10-169
Power Train System.....	10-238
Layout Drawing of Power Train System	10-238
Operation of Power Train System	10-241
Transmission Control System.....	10-242
Transmission Gear Shift Control System.....	10-244
Transmission Protection Function	10-250
Directional Selector Switch Control Function.....	10-253
Transmission Cut-off Function.....	10-255
Component Parts of Power Train System.....	10-257
Work Equipment System.....	10-316
Layout Drawing of Work Equipment System	10-316
Work Equipment System Diagram (Applicable Machine: 100439 to 101011)	10-318
Work Equipment System Diagram (Applicable Machine: 101012 and Up)	10-320
Work Equipment Control System	10-322
Work Equipment Neutral Lock System	10-326
Remote Positioner System.....	10-328
Bucket Positioner and Boom Positioner	10-333
Auto-Digging System	10-334
Semi-Auto Digging System	10-336
ECSS.....	10-338
Component Parts of Work Equipment System	10-340
Steering System.....	10-348
Layout Drawing of Steering System	10-348
Secondary Steering System.....	10-349
Joystick Steering System	10-351
Steering Column	10-356
Component Parts of Steering System	10-357
Brake System.....	10-378
Layout Drawing of Brake System	10-378
Parking Brake Control System	10-384
Brake Cooling Control System	10-386
Component Parts of Brake System	10-390
Auto-Greasing System	10-422
Layout Drawing of Auto-Greasing System.....	10-422
Specifications of Auto-Greasing System	10-424
Function of Auto-Greasing System.....	10-426
Auto-Greasing System	10-427
Undercarriage and Frame	10-428
Frame, Axle Mount and Center Hinge Pin	10-428
Tires.....	10-430
Work Equipment	10-432

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$