

Shop Manual

WHEEL LOADER

WA480-8

SERIAL NUMBERS 100001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-23
FOREWORD, SAFETY, BASIC INFORMATION	00-29
HOW TO READ THE SHOP MANUAL.....	00-29
SAFETY NOTICE FOR OPERATION.....	00-31
PRECAUTIONS TO PREVENT FIRE.....	00-39
ACTIONS IF FIRE OCCURS	00-41
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-42
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-43
PRECAUTIONS FOR DEF.....	00-44
STORE AdBlue/DEF	00-45
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-49
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-56
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-58
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-59
PRACTICAL USE OF KOMTRAX	00-60
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-61
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-65
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-69
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-73
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-75
HOW TO READ ELECTRICAL WIRE CODE	00-76
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-80
STANDARD TIGHTENING TORQUE TABLE.....	00-83
CONVERSION TABLE	00-90
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING.....	01-9
SPECIFICATIONS	01-11
WEIGHT TABLE	01-16
FUEL, COOLANT, LUBRICANTS (FOR NORTH AMERICA)	01-18
FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION).....	01-20
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-7
UREA SCR SYSTEM.....	10-13
LAYOUT DRAWING OF UREA SCR SYSTEM	10-13
UREA SCR SYSTEM DIAGRAM	10-15
FUNCTION OF UREA SCR SYSTEM.....	10-16
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-33
BOOT-UP SYSTEM	10-42
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-42
SYSTEM OPERATING LAMP SYSTEM	10-44
BATTERY DISCONNECT SWITCH	10-45
PREHEATING SYSTEM	10-46
ENGINE SYSTEM	10-48
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-48
ENGINE CONTROL SYSTEM	10-50
ENGINE POWER MODE SELECTOR SYSTEM.....	10-56
AUTOMATIC IDLE STOP SYSTEM	10-57

COMPONENT PARTS OF ENGINE SYSTEM	10-58
COOLING SYSTEM.....	10-75
LAYOUT DRAWING OF COOLING SYSTEM	10-75
COOLING FAN CONTROL SYSTEM.....	10-77
COMPONENT PARTS OF COOLING SYSTEM.....	10-82
CONTROL SYSTEM.....	10-96
LAYOUT DRAWING OF CONTROL SYSTEM	10-96
MACHINE MONITOR SYSTEM	10-98
REARVIEW MONITOR SYSTEM.....	10-100
KOMTRAX SYSTEM.....	10-101
LOAD METER SYSTEM	10-102
COMPONENT PARTS OF CONTROL SYSTEM.....	10-108
HYDRAULIC SYSTEM.....	10-157
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-157
CLSS	10-158
WORK EQUIPMENT PUMP AND STEERING PUMP CONTROL SYSTEM	10-161
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-162
POWER TRAIN SYSTEM	10-230
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-230
OPERATION OF POWER TRAIN SYSTEM.....	10-233
TRANSMISSION CONTROL SYSTEM	10-234
TRANSMISSION GEAR SHIFT CONTROL SYSTEM.....	10-236
TRANSMISSION PROTECTION FUNCTION	10-242
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION.....	10-245
TRANSMISSION CUT-OFF FUNCTION	10-247
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-249
WORK EQUIPMENT SYSTEM	10-308
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-308
WORK EQUIPMENT SYSTEM DIAGRAM.....	10-310
WORK EQUIPMENT CONTROL SYSTEM.....	10-312
WORK EQUIPMENT NEUTRAL LOCK SYSTEM	10-316
REMOTE POSITIONER SYSTEM	10-318
BUCKET POSITIONER AND BOOM POSITIONER.....	10-323
AUTO-DIGGING SYSTEM.....	10-324
ECSS.....	10-326
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-328
STEERING SYSTEM.....	10-336
LAYOUT DRAWING OF STEERING SYSTEM	10-336
SECONDARY STEERING SYSTEM.....	10-339
AJSS	10-341
STEERING COLUMN	10-347
COMPONENT PARTS OF STEERING SYSTEM.....	10-348
BRAKE SYSTEM.....	10-372
LAYOUT DRAWING OF BRAKE SYSTEM	10-372
PARKING BRAKE CONTROL SYSTEM	10-375
BRAKE COOLING CONTROL SYSTEM.....	10-377
COMPONENT PARTS OF BRAKE SYSTEM.....	10-378
AUTO-GREASING SYSTEM	10-405
LAYOUT DRAWING OF AUTO-GREASING SYSTEM.....	10-405
SPECIFICATIONS OF AUTO-GREASING SYSTEM	10-406
FUNCTION OF AUTO-GREASING SYSTEM	10-408
COMPONENT PARTS OF AUTO-GREASING SYSTEM	10-409
UNDERCARRIAGE AND FRAME.....	10-410
FRAME, AXLE MOUNT AND CENTER HINGE PIN	10-410
TIRE	10-412
WORK EQUIPMENT.....	10-414
STRUCTURE OF WORK EQUIPMENT	10-414
STRUCTURE OF BUCKET.....	10-415

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$