

# Shop Manual

WHEEL LOADER

**WA480-8E0**

SERIAL NUMBERS 100439 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-26
Foreword, Safety, Basic Information .....	00-32
How to Read the Shop Manual .....	00-32
Safety Notice for Operation .....	00-34
Precautions to Prevent Fire .....	00-42
Procedures If Fire Occurs .....	00-44
Precautions for Disposing of Waste Materials .....	00-45
Procedures for Exhaust Gas Regulations .....	00-46
Precautions for DEF .....	00-47
Store DEF .....	00-48
Precautions When You Handle Hydraulic Equipment .....	00-49
Precautions When You Disconnect and Connect Pipings .....	00-52
Precautions When You Handle Electrical Equipment .....	00-59
Precautions When You Handle Fuel System Equipment .....	00-61
Precautions When You Handle Intake System Equipment .....	00-62
Practical Use of KOMTRAX .....	00-63
Disconnect and Connect Push-Pull Type Coupler .....	00-64
Precautions for Disconnection and Connection of Connectors .....	00-68
How to Disconnect and Connect Deutsch Connector .....	00-72
How to Disconnect and Connect Slide Lock Type Connector .....	00-73
How to Disconnect and Connect Connector with Lock to Pull .....	00-75
How to Disconnect and Connect Connector with Lock to Push .....	00-76
How to Disconnect and Connect Connector with Housing to Rotate .....	00-78
How to Read the Codes for Electric Cable .....	00-79
Explanation of Terms for Maintenance Standard .....	00-83
Standard Tightening Torque Table .....	00-86
Conversion Table .....	00-93
01 Specifications .....	01-1
Table of Contents .....	01-2
Abbreviation List .....	01-3
Specifications .....	01-9
Specification Drawing .....	01-9
Specifications .....	01-11
Weight Table .....	01-16
Fuel, Coolant, Lubricants (For North America) .....	01-18
Fuel, Coolant, Lubricants (For European Union) .....	01-20
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Abbreviation List .....	10-7
Urea SCR System .....	10-13
Layout Drawing of Urea SCR System .....	10-13
Urea SCR System Diagram .....	10-15
Function of Urea SCR System .....	10-16
Component Parts of Urea SCR System .....	10-33
Boot-up System .....	10-42
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal) .....	10-42
Layout Drawing of Boot-up System (Machine with Gateway Function Controller) .....	10-44
System Operating Lamp System .....	10-46
Battery Disconnect Switch .....	10-49
Preheating System .....	10-50
Engine System .....	10-52
Layout Drawing of Engine System .....	10-52
Engine Control System .....	10-54
Engine Power Mode Selector System .....	10-60
Automatic Idle Stop System .....	10-62

Component Parts of Engine System .....	10-63
Cooling System.....	10-80
Layout Drawing of Cooling System .....	10-80
Cooling Fan Control System .....	10-82
Component Parts of Cooling System .....	10-87
Control System .....	10-101
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-101
Layout Drawing of Control System (Machine with Gateway Function Controller) .....	10-103
Machine Monitor System.....	10-105
Rearview Monitor System .....	10-107
KOMTRAX System .....	10-108
Load Meter System.....	10-110
Component Parts of Control System .....	10-117
Hydraulic System .....	10-175
Layout Drawing of Hydraulic System.....	10-175
CLSS .....	10-176
Work Equipment Pump and Steering Pump Control System .....	10-180
Component Parts of Hydraulic System.....	10-181
Power Train System.....	10-251
Layout Drawing of Power Train System .....	10-251
Operation of Power Train System .....	10-254
Transmission Control System.....	10-255
Transmission Gear Shift Control System.....	10-257
Transmission Protection Function .....	10-263
Directional Selector Switch Control Function.....	10-266
Transmission Cut-off Function.....	10-268
Component Parts of Power Train System.....	10-270
Work Equipment System.....	10-331
Layout Drawing of Work Equipment System .....	10-331
Work Equipment System Diagram (Applicable Machine: 100439 to 101011) .....	10-333
Work Equipment System Diagram (Applicable Machine: 101012 and Up) .....	10-335
Work Equipment Control System .....	10-337
Work Equipment Neutral Lock System .....	10-341
Remote Positioner System.....	10-343
Bucket Positioner and Boom Positioner .....	10-348
Auto-Digging System .....	10-349
ECSS .....	10-351
Component Parts of Work Equipment System .....	10-353
Steering System.....	10-361
Layout Drawing of Steering System .....	10-361
Secondary Steering System.....	10-364
AJSS.....	10-366
Steering Column .....	10-372
Component Parts of Steering System .....	10-373
Brake System.....	10-397
Layout Drawing of Brake System .....	10-397
Parking Brake Control System .....	10-402
Brake Cooling Control System .....	10-404
Component Parts of Brake System .....	10-407
Auto-Greasing System .....	10-438
Layout Drawing of Auto-Greasing System.....	10-438
Specifications of Auto-Greasing System .....	10-439
Function of Auto-Greasing System.....	10-441
Auto-Greasing System .....	10-442
Undercarriage and Frame .....	10-443
Frame, Axle Mount and Center Hinge Pin .....	10-443
Tires.....	10-445
Work Equipment .....	10-447

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$