

# Shop Manual

WHEEL LOADER

**WA480-8E0**

SERIAL NUMBERS H53151 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-25
FOREWORD, SAFETY, BASIC INFORMATION .....	00-31
HOW TO READ THE SHOP MANUAL .....	00-31
SAFETY NOTICE FOR OPERATION .....	00-33
PRECAUTIONS TO PREVENT FIRE .....	00-41
ACTIONS IF FIRE OCCURS .....	00-43
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-44
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-45
PRECAUTIONS FOR DEF .....	00-46
STORE AdBlue/DEF .....	00-47
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-48
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-51
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-58
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-60
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-61
PRACTICAL USE OF KOMTRAX .....	00-62
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-63
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-67
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-71
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-74
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-75
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-77
HOW TO READ ELECTRICAL WIRE CODE .....	00-78
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-82
STANDARD TIGHTENING TORQUE TABLE .....	00-85
CONVERSION TABLE .....	00-92
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
SPECIFICATIONS .....	01-11
WEIGHT TABLE .....	01-16
FUEL, COOLANT, LUBRICANTS (FOR NORTH AMERICA) .....	01-18
FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION) .....	01-20
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-7
UREA SCR SYSTEM .....	10-13
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-13
UREA SCR SYSTEM DIAGRAM .....	10-15
FUNCTION OF UREA SCR SYSTEM .....	10-16
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-33
BOOT-UP SYSTEM .....	10-42
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH KOMTRAX TERMINAL) .....	10-42
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL-	10-44
LER) .....	
SYSTEM OPERATING LAMP SYSTEM .....	10-46
BATTERY DISCONNECT SWITCH .....	10-49
PREHEATING SYSTEM .....	10-50
ENGINE SYSTEM .....	10-52
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-52
ENGINE CONTROL SYSTEM .....	10-54

ENGINE POWER MODE SELECTOR SYSTEM.....	10-60
AUTOMATIC IDLE STOP SYSTEM .....	10-62
COMPONENT PARTS OF ENGINE SYSTEM .....	10-63
COOLING SYSTEM.....	10-80
LAYOUT DRAWING OF COOLING SYSTEM .....	10-80
COOLING FAN CONTROL SYSTEM.....	10-82
COMPONENT PARTS OF COOLING SYSTEM.....	10-87
CONTROL SYSTEM.....	10-101
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH KOMTRAX TERMINAL) .....	10-101
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL- LER).....	10-103
MACHINE MONITOR SYSTEM .....	10-105
REARVIEW MONITOR SYSTEM.....	10-107
KOMTRAX SYSTEM.....	10-108
LOAD METER SYSTEM .....	10-110
COMPONENT PARTS OF CONTROL SYSTEM.....	10-117
HYDRAULIC SYSTEM.....	10-171
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-171
CLSS .....	10-172
WORK EQUIPMENT PUMP AND STEERING PUMP CONTROL SYSTEM .....	10-176
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-177
POWER TRAIN SYSTEM .....	10-247
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-247
OPERATION OF POWER TRAIN SYSTEM.....	10-250
TRANSMISSION CONTROL SYSTEM .....	10-251
TRANSMISSION GEAR SHIFT CONTROL SYSTEM.....	10-253
TRANSMISSION PROTECTION FUNCTION .....	10-259
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION.....	10-262
TRANSMISSION CUT-OFF FUNCTION .....	10-264
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-266
WORK EQUIPMENT SYSTEM .....	10-327
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-327
WORK EQUIPMENT SYSTEM DIAGRAM.....	10-329
WORK EQUIPMENT CONTROL SYSTEM.....	10-331
WORK EQUIPMENT NEUTRAL LOCK SYSTEM .....	10-335
REMOTE POSITIONER SYSTEM .....	10-337
BUCKET POSITIONER AND BOOM POSITIONER.....	10-342
AUTO-DIGGING SYSTEM.....	10-343
ECSS.....	10-345
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-347
STEERING SYSTEM.....	10-355
LAYOUT DRAWING OF STEERING SYSTEM .....	10-355
SECONDARY STEERING SYSTEM.....	10-358
AJSS .....	10-360
STEERING COLUMN .....	10-366
COMPONENT PARTS OF STEERING SYSTEM.....	10-367
BRAKE SYSTEM.....	10-391
LAYOUT DRAWING OF BRAKE SYSTEM .....	10-391
PARKING BRAKE CONTROL SYSTEM .....	10-396
BRAKE COOLING CONTROL SYSTEM.....	10-398
COMPONENT PARTS OF BRAKE SYSTEM.....	10-401
AUTO-GREASING SYSTEM .....	10-431
LAYOUT DRAWING OF AUTO-GREASING SYSTEM.....	10-431
SPECIFICATIONS OF AUTO-GREASING SYSTEM .....	10-432
FUNCTION OF AUTO-GREASING SYSTEM .....	10-434
COMPONENT PARTS OF AUTO-GREASING SYSTEM .....	10-435
UNDERCARRIAGE AND FRAME.....	10-436
FRAME, AXLE MOUNT AND CENTER HINGE PIN .....	10-436

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$