

# Shop Manual

WHEEL LOADER

**WA500-6**

SERIAL NUMBERS H60051 and up

**ecot3**



---

# **WHEEL LOADER**

## **WA500-6**

**Machine model      Serial number**

WA500-6              55001 and up

---

## **00 Index and foreword**

### **Index**

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
00 Index and foreword	
Index	SEN00701-17
Foreword and general information	SEN00702-05
01 Specification	
Specification and technical data	SEN00703-02
10 Structure, function and maintenance standard	
Engine and cooling system	SEN00704-01
Power train, Part 1	SEN00705-03
Power train, Part 2	SEN00864-02
Steering system	SEN00706-03
Brake system	SEN00707-02
Undercarriage and frame	SEN00708-01
Hydraulic system, Part 1	SEN00709-02
Hydraulic system, Part 2	SEN00875-01
Work equipment	SEN00710-02
Cab and its attachments	SEN00711-01
Electrical system, Part 1	SEN00712-04
Electrical system, Part 2	SEN00713-02
Electrical system, Part 3	SEN00874-02
Central lubrication system (CLS)	CLS10-01
20 Standard value table	
Standard service value table	SEN00724-04
30 Testing and adjusting	
Testing and adjusting, Part 1	SEN00725-07
Testing and adjusting, Part 2	SEN00726-05
Testing and adjusting, Part 3	SEN00727-05
Testing and adjusting, Part 4	SEN00728-07
40 Troubleshooting	
General information on troubleshooting	SEN00729-01
Troubleshooting by failure code (Display of code), Part 1	SEN00730-01
Troubleshooting by failure code (Display of code), Part 2	SEN00731-02

Troubleshooting by failure code (Display of code), Part 3	SEN00732-03
Troubleshooting by failure code (Display of code), Part 4	SEN00733-03
Troubleshooting by failure code (Display of code), Part 5	SEN00734-02
Troubleshooting by failure code (Display of code), Part 6	SEN00735-01
Troubleshooting by failure code (Display of code), Part 7	SEN00736-01
Troubleshooting by failure code (Display of code), Part 8	SEN00737-01
Troubleshooting by failure code (Display of code), Part 9	SEN00738-01
Troubleshooting by failure code (Display of code), Part 10	SEN00739-01
Troubleshooting of electrical system (E-mode)	SEN00740-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00741-00
Troubleshooting of engine (S-mode)	SEN00742-03
Troubleshooting of Central Lubrication System (CLS)	CLS40-01
50 Disassembly and assembly	
General information on disassembly and assembly	SEN02022-03
Engine and cooling system, Part 1	SEN02023-03
Engine and cooling system, Part 2	SEN02024-04
Power train, Part 1	SEN02025-03
Power train, Part 2	SEN02026-03
Power train, Part 3	SEN02027-04
Brake system	SEN02028-00
Undercarriage and frame	SEN02029-03
Hydraulic system	SEN02030-03
Work equipment	SEN02031-01
Cab and its attachments	SEN02032-03
Electrical system	SEN02033-03
90 Diagrams and drawings	
Hydraulic diagrams and drawings	SEN00714-04
Electrical diagrams and drawings	SEN00715-03
Connector list and tables	SEN00715-03

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$