

Shop Manual

WHEEL LOADER

WA500-8E0

SERIAL NUMBERS 90278 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-27
Foreword, Safety, Basic Information	00-33
How to Read the Shop Manual	00-33
Safety Notice for Operation	00-35
Precautions to Prevent Fire	00-43
Procedures If Fire Occurs	00-45
Precautions for Disposing of Waste Materials	00-46
Procedures for Exhaust Gas Regulations	00-47
Precautions for DEF	00-48
Store DEF	00-49
Precautions When You Handle Hydraulic Equipment	00-50
Precautions When You Disconnect and Connect Pipings	00-53
Precautions When You Handle Electrical Equipment	00-60
Precautions When You Handle Fuel System Equipment	00-62
Precautions When You Handle Intake System Equipment	00-63
Practical Use of KOMTRAX	00-64
Disconnect and Connect Push-Pull Type Coupler	00-65
Precautions for Disconnection and Connection of Connectors	00-69
How to Disconnect and Connect Deutsch Connector	00-73
How to Disconnect and Connect Slide Lock Type Connector	00-74
How to Disconnect and Connect Connector with Lock to Pull	00-76
How to Disconnect and Connect Connector with Lock to Push	00-77
How to Disconnect and Connect Connector with Housing to Rotate	00-79
How to Read the Codes for Electric Cable	00-80
Explanation of Terms for Maintenance Standard	00-84
Standard Tightening Torque Table	00-87
Conversion Table	00-94
01 Specifications	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing	01-9
Specifications	01-11
Weight Table	01-16
Table of Fuel, Coolant, and Lubricants	01-18
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-7
Urea SCR System	10-13
Layout Drawing of Urea SCR System	10-13
Urea SCR System Diagram	10-16
Function of Urea SCR System	10-17
Component Parts of Urea SCR System	10-28
Boot-up System	10-37
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal)	10-37
Layout Drawing of Boot-up System (Machine with Gateway Function Controller)	10-39
Layout Drawing of Boot-up System (For Emergency Engine Stop Switch Spec) (Machine with KOM- TRAX Terminal)	10-41
Layout Drawing of Boot-up System (For Emergency Engine Stop Switch Spec) (Machine with Gateway Function Controller)	10-43
System Operating Lamp System	10-45
Battery Disconnect Switch	10-48
Preheating System	10-50
Engine Shutdown Secondary Switch	10-52
Engine System	10-54

Layout Drawing of Engine System	10-54
Engine Control System	10-56
Engine Power Mode Selector System	10-63
Automatic Idle Stop System	10-64
RPM Set	10-65
Component Parts of Engine System	10-69
Cooling System.....	10-88
Layout Drawing of Cooling System	10-88
Cooling Fan Control System	10-90
Component Parts of Cooling System	10-95
Control System	10-109
Layout Drawing of Control System (Machine with KOMTRAX Terminal)	10-109
Layout Drawing of Control System (Machine with Gateway Function Controller)	10-111
Machine Monitor System.....	10-113
Rearview Monitor System	10-115
KOMTRAX System	10-116
Load Meter System.....	10-118
Component Parts of Control System	10-125
Hydraulic System	10-178
Layout Drawing of Hydraulic System.....	10-178
CLSS	10-179
Work Equipment Pump Control System	10-183
Component Parts of Hydraulic System.....	10-184
Power Train System.....	10-262
Layout Drawing of Power Train System	10-262
Operation of Power Train System	10-266
Transmission Control System.....	10-267
Transmission Gear Shift Control System.....	10-269
Transmission Protection Function	10-275
Directional Selector Switch Control Function.....	10-278
Transmission Cut-off Function.....	10-280
Component Parts of Power Train System.....	10-282
Work Equipment System.....	10-345
Layout Drawing of Work Equipment System	10-345
Work Equipment System Diagram (Applicable Machine: 90278 to 90960).....	10-347
Work Equipment System Diagram (Applicable Machine: 90961 and Up)	10-349
Work Equipment Control System	10-351
Work Equipment Neutral Lock System	10-356
Remote Positioner System.....	10-358
Bucket Positioner and Boom Positioner	10-363
Auto-Digging System	10-364
ECSS.....	10-366
Component Parts of Work Equipment System	10-368
Steering System.....	10-379
Layout Drawing of Steering System	10-379
Secondary Steering System.....	10-381
Joystick Steering System	10-382
AJSS.....	10-388
Steering Column	10-395
Component Parts of Steering System	10-396
Brake System.....	10-425
Layout Drawing of Brake System	10-425
Parking Brake Control System	10-428
Component Parts of Brake System	10-430
Auto-Greasing System	10-449
Layout Drawing of Auto-Greasing System.....	10-449
Specifications of Auto-Greasing System	10-450
Function of Auto-Greasing System.....	10-452

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$