

Shop Manual

WHEEL LOADER

WA600-8EO

SERIAL NUMBERS 85001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-26
Foreword, Safety, Basic Information.....	00-32
How to Read the Shop Manual	00-32
Safety Notice for Operation	00-34
Precautions to Prevent Fire.....	00-42
Procedures If Fire Occurs	00-43
Precautions for Disposing of Waste Materials	00-43
Procedures for Exhaust Gas Regulations.....	00-44
Precautions for DEF.....	00-45
Store DEF	00-46
Precautions When You Handle Hydraulic Equipment.....	00-47
Precautions When You Disconnect and Connect Pipings.....	00-50
Precautions When You Handle Electrical Equipment	00-57
Precautions When You Handle Fuel System Equipment	00-59
Precautions When You Handle Intake System Equipment	00-60
Practical Use of KOMTRAX	00-61
Disconnect and Connect Push-Pull Type Coupler	00-62
Precautions for Disconnection and Connection of Connectors	00-66
How to Disconnect and Connect Deutsch Connector	00-70
How to Disconnect and Connect Slide Lock Type Connector	00-71
How to Disconnect and Connect Connector with Lock to Pull	00-72
How to Disconnect and Connect Connector with Lock to Push	00-73
How to Disconnect and Connect Connector with Housing to Rotate	00-75
How to Read the Codes for Electric Cable	00-76
Explanation of Terms for Maintenance Standard	00-80
Standard Tightening Torque Table.....	00-83
Conversion Table	00-90
01 Specifications	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing.....	01-9
Specifications.....	01-11
Weight Table	01-16
Fuel, Coolant, Lubricant.....	01-18
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-7
Urea SCR System.....	10-13
Layout Drawing of Urea SCR System	10-13
Urea SCR System Diagram	10-18
Function of Urea SCR System	10-20
Component Parts of Urea SCR System	10-30
Boot-up System	10-40
Layout Drawing of Boot-up System	10-40
Layout Drawing of Boot-up System (For Emergency Engine Stop Switch Spec)	10-42
System Operating Lamp System.....	10-44
Battery Disconnect Switch.....	10-46
Preheating System.....	10-48
Engine Shutdown Secondary Switch.....	10-50
Engine System.....	10-52
Layout Drawing of Engine System	10-52
Engine Control System	10-54
Engine Power Mode Selector System	10-58
Automatic Idle Stop System	10-59

RPM Set	10-60
Component Parts of Engine System	10-62
Cooling System.....	10-82
Layout Drawing of Cooling System	10-82
Cooling Fan Control System	10-85
Component Parts of Cooling System	10-89
Control System	10-107
Layout Drawing of Control System	10-107
Machine Monitor System.....	10-109
Rearview Monitor System	10-111
KOMTRAX Plus System	10-112
Load Meter System.....	10-114
Component Parts of Control System	10-120
Hydraulic System	10-186
Layout Drawing of Hydraulic System.....	10-186
CLSS	10-187
Work Equipment Pump Control System	10-191
Component Parts of Hydraulic System.....	10-193
Power Train System.....	10-265
Layout Drawing of Power Train System	10-265
Operation of Power Train System	10-269
Transmission Control System.....	10-270
Transmission Gear Shift Control System.....	10-274
Transmission Protection Function	10-280
Component Parts of Power Train System.....	10-285
Work Equipment System.....	10-358
Layout Drawing of Work Equipment System	10-358
Work Equipment System Diagram	10-360
Work Equipment Control System	10-362
Work Equipment Neutral Lock System	10-370
Remote Positioner System.....	10-372
Bucket Positioner and Boom Positioner	10-377
Auto-Digging System	10-378
ECSS	10-380
Component Parts of Work Equipment System	10-382
Steering System.....	10-388
Layout Drawing of Steering System	10-388
AJSS.....	10-390
Steering Column	10-398
Component Parts of Steering System	10-399
Brake System.....	10-431
Layout Drawing of Brake System	10-431
Parking Brake Control System	10-434
Component Parts of Brake System	10-436
Undercarriage and Frame	10-458
Frame, Axle Mount and Center Hinge Pin	10-458
Tires	10-461
Work Equipment	10-463
Structure of Work Equipment	10-463
Structure of Bucket.....	10-464
Structure of Lubrication System for Work Equipment	10-465
CAB Related Parts	10-467
ROPS CAB	10-467
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: WA600-8E0	20-9

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$