

Shop Manual

WHEEL DOZER

WD600-6

SERIAL NUMBERS 55001 and up

ecot3

KOMATSU

WHEEL DOZER

WD600-6

Machine model	Serial number
WD600-6	55001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04979-13
00 Index and foreword	SEN04980-13
100 Index	SEN04981-13
200 Foreword and general information	SEN04982-02
01 Specification	SEN04983-01
100 Specification and technical data.....	SEN04984-01
10 Structure, function and maintenance standard.....	SEN04985-04
100 Engine and cooling system	SEN04986-00
201 Power train, Part 1	SEN04987-00
202 Power train, Part 2	SEN04988-00
300 Steering system	SEN04989-01
400 Brake system	SEN04990-00
500 Undercarriage and frame	SEN04991-00
601 Hydraulic system, Part 1	SEN04992-00
602 Hydraulic system, Part 2	SEN04993-00
700 Work equipment.....	SEN04994-00
800 Cab and its attachments	SEN04995-00
901 Electrical system, Part 1	SEN04996-02
902 Electrical system, Part 2	SEN04997-00
903 Electrical system, Part 3	SEN04998-02
20 Standard value table.....	SEN04999-02
100 Standard service value table.....	SEN05044-02
30 Testing and adjusting	SEN05000-08
101 Testing and adjusting, Part 1.....	SEN05045-04
102 Testing and adjusting, Part 2.....	SEN05046-01
103 Testing and adjusting, Part 3.....	SEN05047-02
104 Testing and adjusting, Part 4.....	SEN05048-06
40 Troubleshooting.....	SEN05001-03
100 Failure code table and fuse locations	SEN05049-01
200 General information on troubleshooting.....	SEN05050-01
301 Troubleshooting by failure code (Display of code), Part 1	SEN05051-01
302 Troubleshooting by failure code (Display of code), Part 2	SEN05052-02
303 Troubleshooting by failure code (Display of code), Part 3	SEN05053-02
304 Troubleshooting by failure code (Display of code), Part 4	SEN05054-02
305 Troubleshooting by failure code (Display of code), Part 5	SEN05055-02
306 Troubleshooting by failure code (Display of code), Part 6	SEN05056-03
307 Troubleshooting by failure code (Display of code), Part 7	SEN05057-01
308 Troubleshooting by failure code (Display of code), Part 8	SEN05058-01
309 Troubleshooting by failure code (Display of code), Part 9	SEN05059-01
310 Troubleshooting by failure code (Display of code), Part 10	SEN05060-01

400	Troubleshooting of electrical system (E-mode)	SEN05061-01
500	Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN05062-01
600	Troubleshooting of engine (S-mode)	SEN05063-00
50	Disassembly and assembly	SEN05002-05
100	General information on disassembly and assembly.....	SEN05141-00
201	Engine and cooling system, Part 1	SEN05142-01
202	Engine and cooling system, Part 2.....	SEN05143-02
301	Power train, Part 1.....	SEN05144-01
302	Power train, Part 2.....	SEN05145-02
303	Power train, Part 3.....	SEN05146-01
304	Power train, Part 4.....	SEN05147-00
400	Brake system.....	SEN05148-01
500	Undercarriage and frame	SEN05149-01
600	Hydraulic system	SEN05150-01
700	Work equipment	SEN05151-00
800	Cab and its attachments.....	SEN05152-02
900	Electrical system	SEN05153-00
90	Diagrams and drawings	SEN05003-04
100	Hydraulic diagrams and drawings	SEN05004-01
200	Electrical diagrams and drawings.....	SEN05005-03

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$