

Shop Manual

WHEEL DOZER

WD600-6R

SERIAL NUMBERS 60001 and up

KOMATSU

SHOP MANUAL

WHEEL DOZER

WD600-6R

Machine model Serial number

WD600-6R

60001 and up

00 Index and foreword

Table of contents

00 Index and foreword	
Table of contents	00-2
Foreword and general information	00-14
Safety notice	00-14
How to read the shop manual	00-19
Explanation of terms for maintenance standard	00-21
Handling of electric equipment and hydraulic component	00-23
Handling of connectors newly used for engines	00-32
How to read electric wire code	00-35
Precautions when carrying out operation	00-38
Method of disassembling and connecting push-pull type coupler	00-41
Standard tightening torque table	00-44
Conversion table	00-48
01 Specification	
Specification and technical data	01-3
Specification dimension drawing	01-3
Specifications	01-4
Weight table	01-7
Table of fuel, coolant and lubricants	01-9
10 Structure, function and maintenance standard	
Engine and cooling system	10-4
Engine mount and transmission mount	10-4
Damper	10-6
Cooling system	10-8
Cooling fan pump	10-12
Cooling fan motor	10-20
Power train	10-26
Power train	10-26
Power train system diagram	10-27
Torque converter and transmission piping diagram	10-28
Torque converter	10-30
Modulation clutch	10-39
Torque converter regulator valve	10-40
Transmission	10-42
Transfer	10-62
Transmission control valve	10-64
ECMV	10-66
Main relief valve and torque converter relief valve	10-73
Lubrication relief valve	10-75
Torque converter oil cooler	10-76
Torque converter oil filter	10-77
Drive shaft	10-79
Center support	10-82
Axle	10-84
Differential	10-88
Limited slip differential	10-97
Final drive	10-102
Steering system	10-106
Steering piping diagram	10-106
Steering column	10-108
Joystick steering lever linkage	10-109
Joystick EPC valve	10-110
Lock valve	10-111
Steering valve	10-112

Rotary valve	10-115
Steering control valve	10-118
Two-way restrictor valve	10-134
Stop valve	10-135
Steering pump	10-136
Steering cylinder	10-150
Emergency steering piping diagram	10-151
Diverter valve	10-152
Emergency steering pump	10-160
Brake system	10-162
Brake piping diagram	10-162
Brake	10-164
Brake valve	10-168
Accumulator charge valve	10-176
EPC relief valve	10-182
Accumulator (for brake)	10-184
Slack adjuster	10-186
Parking brake	10-190
Parking brake solenoid valve	10-192
Emergency parking brake release valve	10-194
Brake cooling pump	10-195
Undercarriage and frame	10-196
Axle mount	10-196
Center hinge pin	10-201
Hydraulic system	10-204
Hydraulic piping diagram	10-204
Work equipment control lever linkage	10-206
Hydraulic tank	10-208
Work equipment pump	10-210
Control valve	10-230
CLSS	10-244
Functions and operation by valve	10-248
Accumulator (for PPC circuit)	10-258
Triple pump	10-259
Work equipment	10-260
Work equipment linkage	10-260
Cutting edge and end bit	10-263
Work equipment lubrication	10-265
Hydraulic cylinder	10-268
Cab and its attachments	10-270
ROPS cab	10-270
Air conditioner	10-272
Electrical system	10-276
Machine monitor system	10-276
Machine monitor	10-282
Work equipment control system	10-330
Transmission controller system	10-356
Electric transmission control	10-388
Engine starting/stopping circuit	10-390
Parking brake circuit	10-393
Sensor	10-397
VHMS controller related	10-418
VHMS controller and wireless LAN system	10-419-1
Electric lever (Work equipment)	10-423
20 Standard value table	
Standard service value table	20-3
Standard service value table for engine	20-3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$