

# SERVICE MANUAL

**3040 CVT / 3045 CVT / 3050 CVT**  
Boomer Compact Tractors

1/2

Print No. 84126849A



---

# **BOOMER 3040, 3045, 3050 CVT SERVICE MANUAL COMPLETE CONTENTS**

<b>SECTION 00 - GENERAL INFORMATION .....</b>	<b>2</b>
<b>SECTION 10 - ENGINE .....</b>	<b>4</b>
<b>SECTION 21 - TRANSMISSION .....</b>	<b>11</b>
<b>SECTION 25 - FWD FRONT AXLE .....</b>	<b>15</b>
<b>SECTION 27 - DIFFERENTIAL AND REAR AXLE .....</b>	<b>18</b>
<b>SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS .....</b>	<b>19</b>
<b>SECTION 33 - BRAKES .....</b>	<b>22</b>
<b>SECTION 35 - HYDRAULIC SYSTEM .....</b>	<b>23</b>
<b>SECTION 41 - STEERING .....</b>	<b>27</b>
<b>SECTION 50 - CLIMATE CONTROL .....</b>	<b>30</b>
<b>SECTION 55 - ELECTRICAL .....</b>	<b>34</b>
<b>SECTION 90 - PLATFORM .....</b>	<b>47</b>

**The following pages are the collation of the contents pages from each section and chapter of the Boomer 3040, 3045, 3050 CVT Service manual. Complete Service part # 84126849A.**

**The sections used through out all New Holland product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.**

**The sections listed above are the sections utilized for the Boomer 3040, 3045, 3050 CVT Tractors.**

---

# SECTION 00 - GENERAL INFORMATION

-

## Chapter 1 - General Information

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Introduction .....	3
	Precautionary Statements .....	4
	Personal Safety .....	4
	Machine Safety .....	4
	Information .....	4
	Technical Information .....	5
	Hardware .....	5
	General .....	5
	Plating .....	5
	Nut Tightening .....	5
	Locknuts .....	5
	Jam Nuts .....	5
	Thread Lubrication .....	5
	Safety .....	6
	Precautionary Statements .....	6
	The Tractor .....	6
	Servicing the Tractor .....	6
	Operating the Tractor .....	7
	Driving the Tractor .....	7
	Operating the PTO .....	8
	Diesel Fuel .....	8
	Safety Decals .....	9
	Instruction Decals .....	11
	General Information .....	14
	Universal Symbols .....	16
	Specifications .....	17
	Engine .....	17
	Capacities .....	17
	Air Conditioning System .....	17
	Cooling System .....	18
	Electrical System .....	18

---

# SECTION 00 - GENERAL INFORMATION

-

## Chapter 1 - General Information (Continued)

### CONTENTS

Section	Description	Page
	Fuel System .....	18
	Brakes .....	19
	Steering .....	19
	Power Take-off .....	19
	Hydraulic Lift System .....	19
	Transmission .....	20
	Transmission Speeds - kph (mph) .....	20
	Cast Iron Weights .....	21
	Drawbars .....	21
	3 Point Hitch .....	21
	Tires .....	22
	Wheel Bolt Torques .....	22
	General Dimensions .....	23
	Special Tools .....	30
	Tire Ballast and Pressures .....	32
	Liquid Ballast (Optional) .....	32
	Tire Pressure .....	32
	Rear Tire Liquid .....	32

---

# SECTION 10 - ENGINE

## Chapter 1 - Engine

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	6
	General .....	6
	Cylinder Block .....	6
	Cylinder Head .....	7
	Piston .....	7
	Piston Pin .....	8
	Piston Ring .....	8
	Connecting Rod .....	9
	Crankshaft .....	9
	Camshaft .....	11
	Valves .....	11
	Push Rods .....	12
	Rocker Arm .....	12
	Lubrication System .....	13
	Cooling System .....	13
	Torque Specification .....	14
	Metric Bolt Torque Specifications .....	15
	Special Tools .....	16
	Compression Test and Tools .....	17
	Description of Operation .....	18
	Troubleshooting .....	19
	Cylinder Head and Valve Train Components .....	23
	Separating the Tractor at the Engine - Front Transmission Box .....	24
	Removal .....	24
	Separating the Tractor at the Engine/Frame .....	27
	Installation .....	29
	Attaching the Front Transmission Box to the Engine .....	33
	Overhaul - Engine .....	37
	Fuel Injector and Glow Plug .....	37
	Removal .....	37
	Oil Pressure Switch .....	37

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$