





---

# DUMP TRUCK

## 830E

Machine model	Serial number
830E-5	A50005 - A50153

---

# 00 Index and foreword

## Index

---

---

Table of contents .....	4
-------------------------	---

**Composition of shop manual**

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

□: New module (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

<b><u>Section Title</u></b>	<b><u>Form Number</u></b>
Shop Manual, contents binder, binder label and tabs	CEBM032111
00 Index and foreword	
Index	CEN00040-11 ●
Foreword, safety and general information	CEN00038-08 ●
01 Specification	
Specification and technical data	CEN01019-04 ●
10 Structure and functions	
Steering circuit	CEN10085-01 ●
Hoist circuit	CEN10086-01
Brake circuits	CEN10084-02
Electrical system, 24 volt	CEN10087-02
Heating/air conditioning (HVAC) system	CEN10088-01
Automatic lubrication (auto lube) system	CEN10080-00
Engine emissions after-treatment system	CEN10083-03
20 Standard value table	
Standard value table	CEN20008-00
30 Testing and adjusting	
Steering, hoist and auxiliary hydraulic systems	CEN30096-04
Brake system	CEN30097-05 ●
Accumulators and suspensions	CEN30098-16 ●
Electrical systems	CEN30100-00
Interface module 1 (IM1)	CEN30099-01
Interface module 2 (IM2)	CEN30125-04 ●
KOMTRAX Plus II	CEN30091-02 ●
Payload meter IV	CEN30070-05
Komatsu wireless bridge (KWB)	CEN30101-00
Cab air conditioning	CEN30029-02
Automatic lubrication (auto lube) system	CEN30089-02
KomVision	CEN30105-03 ●

---

Tire monitoring system	CEN30114-00
40 Troubleshooting	
Fuse, diode and relay locations	CEN40197-00
Troubleshooting by Fault Code, part 1	CEN40178-03
Troubleshooting by Fault Code, part 2	CEN40179-04 ●
Troubleshooting by Fault Code, part 3	CEN40180-03
Troubleshooting by Fault Code, part 4	CEN40181-04
Troubleshooting by Fault Code, part 5	CEN40182-03
Aftertreatment system fault codes	CEN40222-02
Steering system	CEN40198-03 ●
KomVision	CEN40200-01
Automatic lubrication (auto lube) system	CEN40202-01
Heating/air conditioning (HVAC) system	CEN40226-00
Electronic fan clutch	CEN40256-01 ●
50 Disassembly and assembly	
Service tools	CEN50074-10 ●
Wheels, spindles and rear axle	CEN50075-10 ●
Brake system	CEN50076-05
Steering system	CEN50080-05 ●
Suspensions	CEN50081-05 ●
Hoist circuit	CEN50082-05 ●
Body and structures	CEN50083-05 ●
Operator cab	CEN50079-05 ●
Power module	CEN50118-08 ●
90 Diagrams and drawings	
Hydraulic circuit diagrams	CEN90025-01
Electrical circuit diagrams	CEN90026-02

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$