ORIGINAL INSTRUCTIONS CEBMO36802 **StailutehSupplement**



This material is proprietary to Komatsu and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.



© Copyright 2023 Komatsu Ltd. or one of its subsidiaries All Rights Reserved Printed in the U.S.A.

SHOP MANUAL

DUMP TRUCK 830E

Machine model Serial number

830E-5 A50174 - A50220

00 Index and foreword Index

Composition of shop manual	. 2
Table of contents	. 4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

- Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.
 - The marks shown to the right of Form No. denote the following:
 - □: New module (to be filed additionally) ●: Revision (to be replaced for each Form No.)
- Note 2: This shop manual can be supplied for each Form No.
- Note 3: To file this shop manual in the special binder for management, handle it as follows:
 - Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
 - File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	CEBM036802
00 Index and foreword Index	CEN00069-02 •
Foreword, safety and general information	CEN00038-08 •
01 Specification	
Specification and technical data	CEN01032-01 ●
10 Structure and functions	
Steering circuit	CEN10085-00
Hoist circuit	CEN10111-00
Brake circuits	CEN10110-00
Electrical system, 24 volt	CEN10109-02 ●
Heating/air conditioning (HVAC) system	CEN10088-01
Automatic lubrication (auto lube) system	CEN10080-00
Engine emissions after-treatment system	CEN10108-00
20 Standard value table	
Standard value table	CEN20008-00
30 Testing and adjusting	
Steering, hoist and auxiliary hydraulic systems	CEN30133-01 •
Brake system	CEN30132-02 •
Accumulators and suspensions	CEN30098-16 •
Electrical systems	CEN30100-00
Interface module 2 (IM2)	CEN30125-04 •
KOMTRAX Plus II	CEN30091-02 •
Payload meter IV	CEN30070-05
Komatsu wireless bridge (KWB)	CEN30101-00
Cab air conditioning	CEN30029-02
Automatic lubrication (auto lube) system	CEN30089-02
KomVision	CEN30105-03 •
Tire monitoring system	CEN30114-00

40 Troubleshooting

Fuse, diode and relay locations Troubleshooting by fault code, part 1 Troubleshooting by fault code, part 2 Troubleshooting by fault code, part 3 Troubleshooting by fault code, part 4 Troubleshooting by fault code, part 5 Aftertreatment system fault codes Steering system KomVision Automatic lubrication (auto lube) system Heating/air conditioning (HVAC) system Electronic fan clutch

50 Disassembly and assembly

Service tools Wheels, spindles and rear axle Brake system Steering system Suspensions Hoist circuit Body and structures Operator cab Power module

90 Diagrams and drawings Hydraulic circuit diagrams Electrical circuit diagrams CEN40197-00 CEN40178-03 CEN40179-04 • CEN40180-03 CEN40181-04 CEN40182-03 CEN40222-02 CEN40198-03 CEN40200-01 CEN40202-01 CEN40226-00 CEN40226-01

- CEN50143-02 •
- CEN50141-04 •
- CEN50142-03 CEN50080-05
- CEN50081-05 •
- CEN50144-01 •
- CEN50083-05 •
- CEN50079-05 •
- CEN50118-07 •

CEN90054-00 CEN90055-00 It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$