

Shop Manual

BULLDOZER

D155AXi-8

(Radio control specification)

SERIAL NUMBERS 100040 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-24
Foreword, Safety, Basic Information	00-27
How to Read the Shop Manual	00-27
Safety Notice for Operation	00-29
Precautions to Prevent Fire	00-37
Procedures If Fire Occurs	00-39
Precautions When You Discard Waste Materials	00-40
Procedures for Exhaust Gas Regulations	00-41
Precautions for DEF	00-42
Store DEF	00-43
Precautions When You Handle Hydraulic Equipment	00-44
Precautions When You Disconnect and Connect Pipings	00-47
Precautions When You Handle Electrical Equipment	00-54
Precautions When You Handle Fuel System Equipment	00-56
Precautions When You Handle Intake System Equipment	00-57
Practical Use of KOMTRAX	00-58
Disconnect and Connect Push-Pull Type Coupler	00-59
Precautions for Disconnection and Connection of Connectors	00-63
Disconnect and Connect Deutsch Connector	00-67
How to Disconnect and Connect Slide Lock Type Connector	00-68
Disconnect and Connect Connector with Lock to Pull	00-70
Disconnect and Connect Connector with Lock to Push	00-71
Disconnect and Connect Connector with Housing to Rotate	00-73
How to Read the Codes for Electric Cable	00-74
Explanation of Terms for Maintenance Standard	00-78
Standard Tightening Torque Table	00-81
Conversion Table	00-88
01 Specification	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Specifications	01-5
Weight Table	01-12
Table of Fuel, Coolant, and Lubricants	01-14
10 Structure and Function	10-1
Table of Contents	10-2
Urea SCR System	10-6
Layout Drawing of Urea SCR System	10-6
Urea SCR System Diagram	10-8
Function of Urea SCR System	10-9
Component Parts of Urea SCR System	10-25
Boot-up System	10-34
Layout Drawing of Boot-up System (Machine with Gateway Function Controller)	10-34
System Operating Lamp System	10-35
Battery Disconnect Switch	10-38
Engine System	10-40
Layout of Engine Control System (Machine with KOMTRAX Terminal)	10-40
Layout of Engine Control System (Machine with Gateway Function Controller)	10-41
Engine Control System	10-43
Automatic Idle Stop System	10-49
Component Parts of Engine System	10-53
Cooling System	10-75
Layout Drawing of Cooling System	10-75
Component Parts of Cooling System	10-77
Control System	10-94

Layout Drawing of Control System (Machine with KOMTRAX Terminal)	10-94
Layout Drawing of Control System (Machine with Gateway Function Controller)	10-95
Machine Monitor System.....	10-96
KOMTRAX System	10-100
Component Parts of Control System	10-102
Hydraulic System	10-143
Layout Drawing of Hydraulic System.....	10-143
CLSS	10-144
Component Parts of Hydraulic System.....	10-147
Power Train System.....	10-211
Layout Drawing of Power Train System	10-211
Operation of Power Train System	10-214
Transmission, Steering, and Brake Control	10-216
Palm Command Control System	10-219
HSS System.....	10-223
Centralized Pressure Pickup Port.....	10-226
Component Parts of Power Train System.....	10-228
Work Equipment System.....	10-311
Work Equipment Control	10-311
Layout Drawing of Front Work Equipment.....	10-313
Layout Drawing of Variable Giant Ripper.....	10-314
Layout Drawing of Variable Multi-Shank Ripper	10-315
Component Parts of Work Equipment System	10-316
ICT System	10-334
Layout Drawing of ICT System.....	10-334
System Diagram of ICT Control System.....	10-336
Blade Control System	10-338
Smooth Start System	10-344
Slip Control System.....	10-346
Assist Control System.....	10-347
Component Parts of ICT System.....	10-349
Radio Control System	10-363
Layout Drawing of Radio Control System.....	10-363
Specifications of Radio Control System.....	10-364
Component Parts of Radio Control System.....	10-365
Undercarriage and Frame	10-372
Main Frame.....	10-372
Suspension	10-373
Track Frame and Idler Cushion	10-376
Work Equipment	10-378
Structure of Front Work Equipment.....	10-378
Structure of Cylinder Stay	10-380
Structure of Variable Giant Ripper.....	10-381
Structure of Variable Multi-Shank Ripper.....	10-382
CAB Related Parts.....	10-383
ROPS CAB	10-383
CAB Mount	10-384
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: D155AXI-8.....	20-3
Standard Value Table for Machine.....	20-8
Standard Value Table for Machine: D155AXI-8	20-8
Machine Posture and Procedures to Measure Performance	20-28
Standard Value Table for Electricity.....	20-30
Standard Value Table for Electricity.....	20-30
30 Testing and Adjusting	30-1
Table of Contents	30-2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$