

Shop Manual

BULLDOZER

D375A-6R

SERIAL NUMBERS 65001 and up

KOMATSU

SHOP MANUAL

BULLDOZER

D375A-6R

Machine model Serial number

D375A-6R 65001 and up

00 Index and foreword

Table of contents

Notice of revision	1
00 Index and Foreword	
Table of contents	00 - 2
Table of contents	00 - 2
Foreword and general information	00 - 5
Safety notice	00 - 5
How to read the shop manual	00 - 10
Explanation of terms for maintenance standard	00 - 12
Handling of electric equipment and hydraulic components.....	00 - 14
Handling of connectors newly used for engines	00 - 23
How to read electric wire code	00 - 26
Precautions when carrying out work	00 - 29
Method of disassembling and connecting push-pull type coupler.....	00 - 32
Standard tightening torque table.....	00 - 35
List of Abbreviation	00 - 39
Conversion table	00 - 43
01 Specification	
Specification and technical data	01 - 3
Specification drawing	01 - 3
Specifications.....	01 - 4
Weight table	01 - 9
Table of fuel, coolant and lubricants	01 - 11
10 Structure and function	
Engine and cooling system	10- 4
Cooling system	10- 4
Cooling fan pump.....	10- 7
Cooling fan motor.....	10- 28
Power train.....	10- 34
Power train	10- 34
Overall drawing of power train unit	10- 36
Power train hydraulic equipment arrangement drawing.....	10- 38
Damper and universal joint	10- 40
Torque converter and PTO	10- 42
Torque converter control valve	10- 48
Main relief valve and torque converter relief valve.....	10- 50
Lockup clutch ECMV and stator clutch ECMV.....	10- 52
Scavenging pump	10- 57
Transmission control.....	10- 58
PCCS lever	10- 60
Transmission.....	10- 64
Transmission ECMV	10- 78
Transmission lubrication relief valve	10- 83
Steering and brake control.....	10- 84
Transfer unit, bevel gear shaft and steering	10- 86
Steering control valve	10- 92
Steering clutch ECMV and Steering brake ECMV	10- 94
Parking brake valve	10- 102
Sudden stop prevention valve.....	10- 103
Final drive	10- 105

Undercarriage and frame	10- 110
Track frame	10- 110
Idler cushion	10- 112
Track roller bogie	10- 113
Main frame	10- 114
Suspension	10- 116
Hydraulic system	10- 119
Work equipment hydraulic piping diagram	10- 119
PPC control piping diagram	10- 123
Work equipment control	10- 124
Hydraulic tank	10- 126
Accumulator	10- 128
PPC lock valve	10- 129
PPC valve	10- 130
Piston valve	10- 142
Quick drop valve	10- 143
Pin puller switch	10- 145
Pin puller solenoid valve	10- 146
Blade control lever (only for the machine with dual tilt specification)	10- 148
Work equipment pump	10- 150
Control valve	10- 162
Self-pressure reducing valve	10- 187
Work equipment	10- 194
Cylinder stay	10- 194
Cab	10- 195
Cab mount	10- 195
Cab	10- 196
Electrical system	10- 198
Engine control	10- 198
Engine control system	10- 199
CRI engine control system	10- 208
Monitor system	10- 210
Machine monitor	10- 212
Lamp system	10- 230
Engine preheat (electrical intake air heater) control	10- 231
Palm command control system	10- 232
Sensor	10- 235
Vehicle health monitoring system (VHMS)	10- 241
ORBCOMM system	10- 247
Pre-lubrication system	10- 250
 20 Standard value table	
Standard service value table	20- 3
Standard value table for engine	20- 3
Standard value table for machine	20- 4
 30 Testing and adjusting	
Tools for testing, adjusting and troubleshooting	30- 4
Diagnosis equipment list	30- 4
Engine and cooling system	30- 6
Testing engine speed	30- 6
Testing intake air pressure (boost pressure)	30- 9
Testing exhaust temperature	30- 11
Testing exhaust gas color	30- 14

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$