

Shop Manual

BULLDOZER

D375A-8

SERIAL NUMBERS 80001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-21
Foreword, Safety, Basic Information	00-24
How to Read the Shop Manual	00-24
Safety Notice for Operation	00-26
Precautions to Prevent Fire	00-34
Procedures If Fire Occurs	00-36
Precautions When You Discard Waste Materials	00-37
Precautions When You Handle Hydraulic Equipment	00-38
Precautions When You Disconnect and Connect Pipings	00-41
Precautions When You Handle Electrical Equipment	00-47
Precautions When You Handle Fuel System Equipment	00-49
Precautions When You Handle Intake System Equipment	00-50
Practical Use of KOMTRAX	00-51
Disconnect and Connect Push-Pull Type Coupler	00-52
Precautions for Disconnection and Connection of Connectors	00-56
How to Disconnect and Connect Deutsch Connector	00-60
How to Disconnect and Connect Slide Lock Type Connector	00-61
How to Disconnect and Connect Connector with Lock to Pull	00-63
How to Disconnect and Connect Connector with Lock to Push	00-64
How to Disconnect and Connect Connector with Housing to Rotate	00-66
How to Read the Codes for Electric Cable	00-67
Explanation of Terms for Maintenance Standard	00-71
Standard Tightening Torque Table	00-74
Conversion Table	00-81
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Specifications	01-5
Weight Table	01-12
Fuel, Coolant, Lubricants (For North America)	01-15
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-5
System Operating Lamp System	10-5
Battery Disconnect Switch	10-7
Battery Isolator	10-9
Engine System	10-11
Layout Drawing of Engine System	10-11
Engine Control System	10-13
Automatic Idle Stop System	10-15
Component Parts of Engine System	10-18
Fuel System	10-37
Cooling System	10-43
Layout Drawing of Cooling System	10-43
Component Parts of Cooling System	10-45
Control System	10-73
Layout Drawing of Control System	10-73
Machine Monitor System	10-74
KOMTRAX Plus System	10-77
Component Parts of Control System	10-79
Hydraulic System	10-131
Layout Drawing of Hydraulic System	10-131
CLSS	10-132
Component Parts of Hydraulic System	10-135

Power Train System	10-166
Layout Drawing of Power Train System	10-166
Operation of Power Train System	10-169
Transmission, Steering, and Brake Control	10-170
Palm Command Control System	10-175
Centralized Pressure Pickup Port.....	10-179
Component Parts of Power Train System.....	10-181
Work Equipment System.....	10-237
Work Equipment Control	10-237
Layout Drawing of Front Work Equipment.....	10-239
Layout Drawing of Variable Giant Ripper.....	10-240
Layout Drawing of Variable Multi-Shank Ripper	10-241
Shoe Slip Control System	10-242
Component Parts of Work Equipment System	10-243
Lifting System	10-256
Power Ladder System.....	10-256
Component Parts of Lifting System	10-259
Undercarriage and Frame	10-262
Main Frame.....	10-262
Suspension	10-264
Track Frame and Idler Cushion	10-267
Work Equipment	10-269
Structure of Front Work Equipment	10-269
Structure of Cylinder Stay	10-271
Structure of Variable Giant Ripper.....	10-272
Structure of Variable Multi-Shank Ripper.....	10-273
CAB Related Parts.....	10-274
ROPS.....	10-274
CAB	10-275
CAB Mount	10-276
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: D375A-8	20-3
Standard Value Table for Machine.....	20-9
Standard Value Table for Machine: D375A-8.....	20-9
Machine Posture and Procedures to Measure Performance	20-33
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-5
Related Information on Testing and Adjusting	30-6
Tools for Testing and Adjusting.....	30-6
Sketch of Tools for Testing and Adjusting	30-12
Engine and Cooling System	30-14
Examine Engine Speed.....	30-14
Examine Boost Pressure.....	30-18
Examine Exhaust Gas Temperature	30-21
Examine Exhaust Gas Color	30-25
Examine and Adjust Valve Clearance.....	30-29
Examine Compression Pressure	30-32
Examine Blowby Pressure	30-36
Examine Engine Oil Pressure	30-38
Examine EGR Valve and VGT Oil Pressure	30-40
Examine Fuel Pressure	30-41
Examine Fuel Return Rate and Leakage.....	30-43
Bleed Air from Fuel System.....	30-49
Examine Fuel Circuit for Leakage	30-51
Examine Supply Pump.....	30-53

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$