

# Shop Manual

BULLDOZER

***D65EXi -18E0***  
***D65PXi -18E0***

SERIAL NUMBERS

D65EXi-91845  
D65PXi-91845

and up



---

# 00 Index and Foreword

---

# Index

- 00 Index and Foreword ..... 00-1
  - Abbreviation List ..... 00-23
  - Foreword, Safety, Basic Information ..... 00-29
    - How to Read the Shop Manual ..... 00-29
    - Safety Notice for Operation ..... 00-31
    - Precautions to Prevent Fire ..... 00-39
    - Procedures If Fire Occurs ..... 00-41
    - Precautions When You Discard Waste Materials ..... 00-42
    - Procedures for Exhaust Gas Regulations ..... 00-43
    - Precautions for DEF ..... 00-44
    - Store DEF ..... 00-45
    - Precautions When You Handle Hydraulic Equipment ..... 00-46
    - Precautions When You Disconnect and Connect Pipings ..... 00-49
    - Precautions When You Handle Electrical Equipment ..... 00-56
    - Precautions When You Handle Fuel System Equipment ..... 00-58
    - Precautions When You Handle Intake System Equipment ..... 00-59
    - Practical Use of KOMTRAX ..... 00-60
      - Disconnect and Connect Push-Pull Type Coupler ..... 00-61
      - Precautions for Disconnection and Connection of Connectors ..... 00-65
        - Disconnect and Connect Deutsch Connector ..... 00-69
        - How to Disconnect and Connect Slide Lock Type Connector ..... 00-70
          - Disconnect and Connect Connector with Lock to Pull ..... 00-72
          - Disconnect and Connect Connector with Lock to Push ..... 00-73
          - Disconnect and Connect Connector with Housing to Rotate ..... 00-75
        - How to Read the Codes for Electric Cable ..... 00-76
        - Explanation of Terms for Maintenance Standard ..... 00-80
        - Standard Tightening Torque Table ..... 00-83
        - Conversion Table ..... 00-90

- 01 Specification ..... 01-1
- Table of Contents ..... 01-2
- Abbreviation List ..... 01-3
- Specifications ..... 01-9
  - Specification Drawing ..... 01-9
  - Specifications ..... 01-13
  - Weight Table ..... 01-29
  - Table of Fuel, Coolant, and Lubricants ..... 01-36
- 10 Structure and Function ..... 10-1
- Table of Contents ..... 10-2
- Abbreviation List ..... 10-6
- Urea SCR System ..... 10-12
  - Layout Drawing of Urea SCR System ..... 10-12
  - Urea SCR System Diagram ..... 10-14
  - Function of Urea SCR System ..... 10-15
  - Component Parts of Urea SCR System ..... 10-31
- Boot-up System ..... 10-40
  - Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal) ..... 10-40
  - Layout Drawing of Boot-up System (Machine with Gateway Function Controller) ..... 10-42
  - System Operating Lamp System ..... 10-44
  - Battery Disconnect Switch ..... 10-47
- Engine System ..... 10-49
  - Layout Drawing of Engine System ..... 10-49
  - Engine Control System ..... 10-51
  - Automatic Idle Stop System ..... 10-62
  - Component Parts of Engine System ..... 10-66
- Cooling System ..... 10-85
  - Layout Drawing of Cooling System ..... 10-85

Cooling Fan Control System .....	10-87
Component Parts of Cooling System .....	10-90
Control System .....	10-107
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-107
Layout Drawing of Control System (Machine with Gateway Function Controller) .....	10-108
Machine Monitor System.....	10-109
KOMTRAX System .....	10-111
Component Parts of Control System .....	10-113
Hydraulic System .....	10-146
Layout Drawing of Hydraulic System.....	10-146
CLSS .....	10-147
Component Parts of Hydraulic System.....	10-150
Power Train System.....	10-201
Layout Drawing of Power Train System .....	10-201
Operation of Power Train System .....	10-204
Transmission, Steering, and Brake Control .....	10-205
Palm Command Control System .....	10-207
HSS System.....	10-211
Centralized Pressure Pickup Port.....	10-214
Component Parts of Power Train System.....	10-215
Work Equipment System.....	10-283
Work Equipment Control .....	10-283
Layout of Tilt Dozer and Power Tilt Pitch Dozer Series .....	10-286
Layout of Power Angle Power Tilt Dozer Series .....	10-287
Layout Drawing of Fixed Multi-Shank Ripper .....	10-288
Component Parts of Work Equipment System .....	10-289
ICT System .....	10-318
Layout Drawing of ICT System.....	10-318
System Diagram of ICT Control System.....	10-321
Blade Control System .....	10-323
Smooth Start System .....	10-329
Slip Control System.....	10-331
Assist Control System.....	10-333
Component Parts of ICT System.....	10-335
Undercarriage and Frame .....	10-364
Main Frame.....	10-364
Suspension .....	10-366
Track Frame and Idler Cushion .....	10-369
Work Equipment .....	10-372
Structure of Front Work Equipment (For Tilt Dozer and Power Tilt Pitch Dozer Series).....	10-372
Structure of Front Work Equipment (For Power Angle Power Tilt Dozer Series).....	10-373
Structure of Fixed Multi-Shank Ripper.....	10-374
CAB Related Parts.....	10-375
ROPS CAB .....	10-375
CAB Mount .....	10-378
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Abbreviation List .....	20-3
Standard Value Table for Engine .....	20-9
Standard Value Table for Engine: D65EXI-18E0 .....	20-9
Standard Value Table for Engine: D65PXI-18E0 .....	20-14
Standard Value Table for Machine.....	20-19
Standard Value Table for Machine: D65EXI-18E0 .....	20-19
Standard Value Table for Machine: D65PXI-18E0 .....	20-35
Machine Posture and Procedures to Measure Performance .....	20-52
Standard Value Table for Electricity.....	20-54
Standard Value Table for Electricity.....	20-54
30 Testing and Adjusting .....	30-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$