

Shop Manual

ARTICULATED
DUMP TRUCK

HM300-2R

SERIAL NUMBERS 7001 and up

KOMATSU

ARTICULATED DUMP TRUCK

HM300-2R

Machine model Serial number

HM300-2R 7001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02269-11
00 Index and foreword	SEN02270-11
Index	SEN02271-11
Foreword and general information	SEN02272-04
01 Specification	SEN02273-00
Specification and technical data	SEN02274-00
10 Structure, function and maintenance standard	SEN02275-02
Engine and cooling system	SEN02664-00
Power train, Part 1	SEN02665-00
Power train, Part 2	SEN02666-00
Steering system	SEN02667-00
Brake system	SEN02668-00
Undercarriage and frame	SEN02669-00
Hydraulic system	SEN02670-00
Cab and its attachments	SEN02671-00
Electrical system, Part 1	SEN02672-00
Electrical system, Part 2	SEN02673-00
Electrical system, Part 3	SEN04842-01
Electrical system, Part 4	SEN02674-01
20 Standard value table	SEN02276-01
Standard service value table	SEN03418-01
30 Testing and adjusting	SEN02277-06
Testing and adjusting, Part 1	SEN03419-04
Testing and adjusting, Part 2	SEN03420-04
Testing and adjusting, Part 3	SEN03421-02
40 Troubleshooting	SEN02278-06
Failure code table and fuse locations	SEN03422-00
General information on troubleshooting	SEN03423-03
Troubleshooting by failure code (Display of code), Part 1	SEN03424-01
Troubleshooting by failure code (Display of code), Part 2	SEN03425-02
Troubleshooting by failure code (Display of code), Part 3	SEN03426-03
Troubleshooting by failure code (Display of code), Part 4	SEN03427-03
Troubleshooting by failure code (Display of code), Part 5	SEN03428-02
Troubleshooting of electrical system (E-mode)	SEN03429-01
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03430-00
Troubleshooting of engine (S-mode)	SEN03431-01
50 Disassembly and assembly	SEN02279-05

General information on disassembly and assembly	SEN04028-03
Engine and cooling system (SAA6D125E-5)	SEN04029-01
Power train, Part 1	SEN04031-01
Power train, Part 2	SEN04032-00
Power train, Part 3	SEN04033-00
Power train, Part 4	SEN04034-02
Power train, Part 5	SEN04035-01
Undercarriage and frame	SEN04036-01
Hydraulic system	SEN04037-00
Body	SEN04038-01
Cab and its attachments	SEN04039-01
Electrical system	SEN04040-00
90 Diagrams and drawings	SEN02280-05
Hydraulic diagrams and drawings	SEN02281-00
Electrical diagrams and drawings	SEN02282-05

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$