

Shop Manual

HYDRAULIC
EXCAVATOR

PC1250 -11
PC1250LC -11
PC1250SP-11

SERIAL NUMBERS PC1250- 50001
 PC1250LC- 50001 and up
 PC1250SP- 50001

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-20
Foreword, Safety, Basic Information	00-23
How to Read the Shop Manual	00-23
Safety Notice for Operation	00-25
Precautions to Prevent Fire	00-33
Procedures If Fire Occurs	00-34
Precautions When You Discard Waste Materials	00-34
Precautions When You Handle Hydraulic Equipment	00-35
Precautions When You Disconnect and Connect Pippings	00-38
Precautions When You Handle Electrical Equipment	00-44
Precautions When You Handle Fuel System Equipment	00-46
Precautions When You Handle Intake System Equipment	00-47
Practical Use of KOMTRAX	00-48
Disconnect and Connect Push-Pull Type Coupler	00-49
Precautions for Disconnection and Connection of Connectors	00-53
How to Disconnect and Connect Deutsch Connector	00-57
How to Disconnect and Connect Slide Lock Type Connector	00-58
How to Disconnect and Connect Connector with Lock to Pull	00-60
How to Disconnect and Connect Connector with Lock to Push	00-61
How to Disconnect and Connect Connector with Housing to Rotate	00-63
How to Read the Codes for Electric Cable	00-64
Explanation of Terms for Maintenance Standard	00-68
Standard Tightening Torque Table	00-71
Conversion Table	00-78
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-7
Specifications	01-11
Weight Table	01-24
Fuel, Coolant, Lubricants (For North America)	01-32
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-6
Layout Drawing of Boot-up System	10-6
System Operating Lamp System	10-7
Battery Disconnect Switch	10-9
Engine System	10-10
Layout Drawing of Engine System	10-10
Engine Control System	10-12
Auto-Deceleration System	10-15
Automatic Low Idle System	10-17
Engine Automatic Warm-up System	10-19
Overheat Prevention System	10-21
Turbocharger Protection System	10-22
Automatic Idle Stop System	10-24
Component Parts of Engine System	10-27
Cooling System	10-48
Layout Drawing of Cooling System	10-48
Fan Speed Control System of Hydraulic Fan	10-50
Engine Output Control System of Hydraulic Fan	10-52
Fan Reverse Rotation System of Hydraulic Fan	10-54
Component Parts of Cooling System	10-55
Control System	10-77

Layout Drawing of Control System	10-77
Machine Monitor System.....	10-79
KomVision System.....	10-80
KOMTRAX Plus System	10-85
Component Parts of Control System	10-90
Hydraulic System	10-142
Layout Drawing of Hydraulic System.....	10-142
OLSS	10-145
Engine and Pump Combined Control System	10-158
Component Parts of Hydraulic System.....	10-162
Work Equipment System.....	10-234
Layout Drawing of Work Equipment System	10-234
Machine Push-up System	10-240
Heavy Lift System	10-242
Boom Shockless Control System	10-245
PPC Lock System	10-247
Work Equipment and Travel Automatic Lock System	10-248
Component Parts of Work Equipment System	10-250
Swing System	10-262
Layout Drawing of Swing System.....	10-262
Swing Control System Diagram	10-265
Swing Priority System Diagram.....	10-269
Swing Compensation System Diagram	10-272
Component Parts of Swing System.....	10-273
Travel System	10-288
Layout Drawing of Travel System.....	10-288
System Diagram of Travel Control System.....	10-292
Component Parts of Travel System.....	10-295
Pneumatic System	10-314
Layout Drawing of Pneumatic System.....	10-314
Pneumatic System Diagram.....	10-315
Component Parts of Pneumatic System.....	10-316
Lifting System	10-321
Hydraulically Operated Stairway System.....	10-321
Component Parts of Lifting System	10-324
Undercarriage and Frame	10-327
Layout Drawing of Undercarriage.....	10-327
Work Equipment	10-329
Structure of Work Equipment	10-329
Function of Work Equipment.....	10-329
Work Equipment Clearance Adjustment Shim.....	10-330
Bucket Clearance Adjustment Shim	10-330
CAB Related Parts.....	10-331
CAB	10-331
CAB Mount	10-332
CAB Tipping Stopper	10-333
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: PC1250-11	20-3
Standard Value Table for Engine: PC1250SP-11.....	20-8
Standard Value Table for Engine: PC1250LC-11	20-13
Standard Value Table for Machine.....	20-18
Standard Value Table for Machine: PC1250-11	20-18
Standard Value Table for Machine: PC1250SP-11	20-32
Standard Value Table for Machine: PC1250LC-11.....	20-46
Standard Value Table for Machine: PC1250-11 (Loading Shovel Specification)	20-60
Machine Posture and Procedures to Measure Performance	20-75

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$