

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC1250 -11***  
***PC1250SP-11***

SERIAL NUMBERS 50001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-19
Foreword, Safety, Basic Information .....	00-22
How to Read the Shop Manual .....	00-22
Safety Notice for Operation .....	00-24
Precautions to Prevent Fire .....	00-32
Procedures If Fire Occurs .....	00-34
Precautions When You Discard Waste Materials .....	00-35
Precautions When You Handle Hydraulic Equipment .....	00-36
Precautions When You Disconnect and Connect Pipings .....	00-39
Precautions When You Handle Electrical Equipment .....	00-45
Precautions When You Handle Fuel System Equipment .....	00-47
Precautions When You Handle Intake System Equipment .....	00-48
Practical Use of KOMTRAX .....	00-49
Disconnect and Connect Push-Pull Type Coupler .....	00-50
Precautions for Disconnection and Connection of Connectors .....	00-54
How to Disconnect and Connect Deutsch Connector .....	00-58
How to Disconnect and Connect Slide Lock Type Connector .....	00-59
How to Disconnect and Connect Connector with Lock to Pull .....	00-61
How to Disconnect and Connect Connector with Lock to Push .....	00-62
How to Disconnect and Connect Connector with Housing to Rotate .....	00-64
How to Read the Codes for Electric Cable .....	00-65
Explanation of Terms for Maintenance Standard .....	00-69
Standard Tightening Torque Table .....	00-72
Conversion Table .....	00-79
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Working Range Drawings .....	01-6
Specifications .....	01-9
Weight Table .....	01-19
Fuel, Coolant, Lubricants (For European Union) .....	01-25
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Boot-up System .....	10-6
Layout Drawing of Boot-up System .....	10-6
System Operating Lamp System .....	10-7
Battery Disconnect Switch .....	10-9
Engine System .....	10-10
Layout Drawing of Engine System .....	10-10
Engine Control System .....	10-13
Auto-Deceleration System .....	10-16
Automatic Low Idle System .....	10-18
Engine Automatic Warm-up System .....	10-20
Overheat Prevention System .....	10-22
Turbocharger Protection System .....	10-23
Automatic Idle Stop System .....	10-25
Component Parts of Engine System .....	10-28
Cooling System .....	10-48
Layout Drawing of Cooling System .....	10-48
Fan Speed Control System of Hydraulic Fan .....	10-50
Engine Output Control System of Hydraulic Fan .....	10-52
Fan Reverse Rotation System of Hydraulic Fan .....	10-54
Component Parts of Cooling System .....	10-55
Control System .....	10-77

Layout Drawing of Control System .....	10-77
Machine Monitor System.....	10-79
KomVision System.....	10-80
KOMTRAX Plus System .....	10-85
Component Parts of Control System .....	10-90
Hydraulic System .....	10-142
Layout Drawing of Hydraulic System.....	10-142
OLSS .....	10-145
Engine and Pump Combined Control System .....	10-158
Component Parts of Hydraulic System.....	10-162
Work Equipment System.....	10-234
Layout Drawing of Work Equipment System .....	10-234
Machine Push-up System .....	10-240
Heavy Lift System.....	10-242
Boom Shockless Control System .....	10-245
PPC Lock System .....	10-247
Work Equipment and Travel Automatic Lock System .....	10-248
Component Parts of Work Equipment System .....	10-250
Swing System .....	10-263
Layout Drawing of Swing System.....	10-263
Swing Control System Diagram .....	10-266
Swing Priority System Diagram.....	10-270
Swing Compensation System Diagram .....	10-273
Component Parts of Swing System.....	10-274
Travel System .....	10-289
Layout Drawing of Travel System.....	10-289
System Diagram of Travel Control System.....	10-293
Component Parts of Travel System.....	10-296
Pneumatic System .....	10-315
Layout Drawing of Pneumatic System.....	10-315
Pneumatic System Diagram.....	10-316
Component Parts of Pneumatic System.....	10-317
Lifting System .....	10-322
Hydraulically Operated Stairway System.....	10-322
Component Parts of Lifting System .....	10-325
Undercarriage and Frame .....	10-328
Layout Drawing of Undercarriage.....	10-328
Work Equipment .....	10-330
Structure of Work Equipment .....	10-330
Function of Work Equipment.....	10-330
Work Equipment Clearance Adjustment Shim.....	10-331
Bucket Clearance Adjustment Shim .....	10-331
CAB Related Parts.....	10-332
CAB .....	10-332
CAB Mount .....	10-333
CAB Tipping Stopper .....	10-334
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: PC1250-11 .....	20-3
Standard Value Table for Engine: PC1250SP-11.....	20-8
Standard Value Table for Machine.....	20-13
Standard Value Table for Machine: PC1250-11 .....	20-13
Standard Value Table for Machine: PC1250-11 (Loading Shovel Specification) .....	20-27
Standard Value Table for Machine: PC1250SP-11 .....	20-42
Machine Posture and Procedures to Measure Performance .....	20-56
Machine Posture and Procedures to Measure Performance (Loading Shovel Specification).....	20-60
30 Testing and Adjusting .....	30-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$