

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC1250 -11E0***  
***PC1250SP-11E0***

SERIAL NUMBERS    PC1250- 50035    and up  
                                 PC1250SP- 50035

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-20
Foreword, Safety, Basic Information .....	00-23
How to Read the Shop Manual .....	00-23
Safety Notice for Operation .....	00-25
Precautions to Prevent Fire .....	00-33
Procedures If Fire Occurs .....	00-35
Precautions When You Discard Waste Materials .....	00-36
Engine Technology to Conform Exhaust Gas Emission .....	00-37
Precautions When You Handle Hydraulic Equipment .....	00-38
Precautions When You Disconnect and Connect Pippings .....	00-41
Precautions When You Handle Electrical Equipment .....	00-47
Precautions When You Handle Fuel System Equipment .....	00-49
Precautions When You Handle Intake System Equipment .....	00-50
Practical Use of KOMTRAX .....	00-51
Disconnect and Connect Push-Pull Type Coupler .....	00-52
Precautions for Disconnection and Connection of Connectors .....	00-56
How to Disconnect and Connect Deutsch Connector .....	00-60
How to Disconnect and Connect Slide Lock Type Connector .....	00-61
How to Disconnect and Connect Connector with Lock to Pull .....	00-63
How to Disconnect and Connect Connector with Lock to Push .....	00-64
How to Disconnect and Connect Connector with Housing to Rotate .....	00-66
How to Read the Codes for Electric Cable .....	00-67
Explanation of Terms for Maintenance Standard .....	00-71
Standard Tightening Torque Table .....	00-74
Conversion Table .....	00-81
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Working Range Drawings .....	01-6
Specifications .....	01-9
Weight Table .....	01-19
Fuel, Coolant, Lubricants (For European Union) .....	01-25
10 Structure and Function .....	10-1
Table of Contents .....	10-2
NOx Control System .....	10-6
Function of NOx Control System .....	10-6
Boot-up System .....	10-9
Layout Drawing of Boot-up System .....	10-9
System Operating Lamp System .....	10-10
Battery Disconnect Switch .....	10-12
Engine System .....	10-13
Layout Drawing of Engine System .....	10-13
Engine Control System .....	10-16
Auto-Deceleration System .....	10-19
Automatic Low Idle System .....	10-21
Engine Automatic Warm-up System .....	10-23
Overheat Prevention System .....	10-25
Turbocharger Protection System .....	10-26
Automatic Idle Stop System .....	10-28
Component Parts of Engine System .....	10-31
Cooling System .....	10-51
Layout Drawing of Cooling System .....	10-51
Fan Speed Control System of Hydraulic Fan .....	10-53
Engine Output Control System of Hydraulic Fan .....	10-55

Fan Reverse Rotation System of Hydraulic Fan .....	10-57
Component Parts of Cooling System .....	10-58
Control System .....	10-80
Layout Drawing of Control System .....	10-80
Machine Monitor System.....	10-82
KomVision System.....	10-83
KOMTRAX Plus System .....	10-88
Component Parts of Control System .....	10-93
Hydraulic System .....	10-146
Layout Drawing of Hydraulic System.....	10-146
OLSS .....	10-149
Engine and Pump Combined Control System .....	10-162
Component Parts of Hydraulic System.....	10-166
Work Equipment System.....	10-238
Layout Drawing of Work Equipment System .....	10-238
Machine Push-up System .....	10-244
Heavy Lift System.....	10-246
Boom Shockless Control System .....	10-249
PPC Lock System .....	10-251
Work Equipment and Travel Automatic Lock System .....	10-252
Component Parts of Work Equipment System .....	10-254
Swing System .....	10-267
Layout Drawing of Swing System.....	10-267
Swing Control System Diagram .....	10-270
Swing Priority System Diagram.....	10-274
Swing Compensation System Diagram .....	10-277
Component Parts of Swing System.....	10-278
Travel System .....	10-293
Layout Drawing of Travel System.....	10-293
System Diagram of Travel Control System.....	10-297
Component Parts of Travel System.....	10-300
Pneumatic System .....	10-319
Layout Drawing of Pneumatic System.....	10-319
Pneumatic System Diagram.....	10-320
Component Parts of Pneumatic System.....	10-321
Lifting System .....	10-326
Hydraulically Operated Stairway System.....	10-326
Component Parts of Lifting System .....	10-329
Undercarriage and Frame .....	10-332
Layout Drawing of Undercarriage.....	10-332
Work Equipment .....	10-334
Structure of Work Equipment .....	10-334
Function of Work Equipment.....	10-334
Work Equipment Clearance Adjustment Shim.....	10-335
Bucket Clearance Adjustment Shim .....	10-335
CAB Related Parts.....	10-336
CAB .....	10-336
CAB Mount .....	10-337
CAB Tipping Stopper .....	10-338
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: PC1250-11E0 .....	20-3
Standard Value Table for Engine: PC1250SP-11E0 .....	20-8
Standard Value Table for Machine.....	20-13
Standard Value Table for Machine: PC1250-11E0.....	20-13
Standard Value Table for Machine: PC1250-11E0 (Loading Shovel Specification) .....	20-27
Standard Value Table for Machine: PC1250SP-11E0 .....	20-42

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$