

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC138US-11E0***

SERIAL NUMBERS 59832 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Foreword, Safety, Basic Information .....	00-19
How to Read the Shop Manual .....	00-19
Safety Notice for Operation .....	00-21
Precautions to Prevent Fire .....	00-29
Procedures If Fire Occurs .....	00-31
Precautions for Disposing of Waste Materials .....	00-32
Procedures for Exhaust Gas Regulations .....	00-33
Precautions for DEF .....	00-34
Store DEF .....	00-35
Precautions When You Handle Hydraulic Equipment .....	00-36
Precautions When You Disconnect and Connect Pipings .....	00-39
Precautions When You Handle Electrical Equipment .....	00-46
Precautions When You Handle Fuel System Equipment .....	00-48
Precautions When You Handle Intake System Equipment .....	00-49
Practical Use of KOMTRAX .....	00-50
Disconnect and Connect Push-Pull Type Coupler .....	00-51
Precautions for Disconnection and Connection of Connectors .....	00-55
How to Disconnect and Connect Deutsch Connector .....	00-59
How to Disconnect and Connect Slide Lock Type Connector .....	00-60
How to Disconnect and Connect Connector with Lock to Pull .....	00-62
How to Disconnect and Connect Connector with Lock to Push .....	00-63
How to Disconnect and Connect Connector with Housing to Rotate .....	00-65
How to Read the Codes for Electric Cable .....	00-66
Explanation of Terms for Maintenance Standard .....	00-70
Standard Tightening Torque Table .....	00-73
Conversion Table .....	00-80
Abbreviation List .....	00-85
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Working Range Drawings .....	01-5
Specifications .....	01-6
Weight Table .....	01-10
Fuel, Coolant, Lubricant .....	01-12
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System .....	10-5
Layout Drawing of Urea SCR System .....	10-5
Urea SCR System Diagram .....	10-7
Function of Urea SCR System .....	10-8
Component Parts of Urea SCR System .....	10-19
Boot-up System .....	10-28
Layout Drawing of Boot-up System .....	10-28
System Operating Lamp System .....	10-29
Battery Disconnect Switch .....	10-30
Engine System .....	10-31
Layout Drawing of Engine System .....	10-31
Engine Control System .....	10-33
Auto-Deceleration System .....	10-36
Engine Automatic Warm-up System .....	10-38
Overheat Prevention System .....	10-40
Turbocharger Protection System .....	10-42
Automatic Idle Stop System .....	10-43
Component Parts of Engine System .....	10-46

Cooling System.....	10-68
Layout Drawing of Cooling System .....	10-68
Fan Speed Control System of Fan Clutch .....	10-70
Engine Output Control System of Fan Clutch .....	10-72
Component Parts of Cooling System .....	10-74
Control System .....	10-75
Layout Drawing of Control System .....	10-75
Machine Monitor System.....	10-77
KomVision System.....	10-79
KOMTRAX System .....	10-83
Component Parts of Control System .....	10-84
Hydraulic System .....	10-127
Layout Drawing of Hydraulic System.....	10-127
CLSS .....	10-129
Engine and Pump Combined Control System .....	10-132
Component Parts of Hydraulic System.....	10-137
Work Equipment System.....	10-226
Layout Drawing of Work Equipment System .....	10-226
Structure of Valve Control .....	10-229
PPC Lock System .....	10-230
Work Equipment and Travel Automatic Lock System .....	10-231
Attachment Oil Flow Adjuster System .....	10-233
Tool Control System.....	10-235
Component Parts of Work Equipment System .....	10-237
Swing System .....	10-264
Layout Drawing of Swing System.....	10-264
Swing Control System Diagram .....	10-266
Component Parts of Swing System.....	10-269
Travel System .....	10-282
Layout Drawing of Travel System.....	10-282
System Diagram of Travel Control System.....	10-284
Component Parts of Travel System.....	10-288
Undercarriage and Frame .....	10-304
Layout Drawing of Undercarriage.....	10-304
Idle Cushion.....	10-305
Work Equipment .....	10-306
Structure of Work Equipment .....	10-306
Function of Work Equipment.....	10-307
Work Equipment Clearance Adjustment Shim.....	10-308
Bucket Clearance Adjustment Shim .....	10-309
CAB Related Parts.....	10-310
ROPS CAB .....	10-310
CAB Mount .....	10-311
Remove Wiring Harness Out of Cab .....	10-313
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: PC138US-11E0 .....	20-3
Standard Value Table for Machine.....	20-7
Standard Value Table for Machine: PC138US-11E0.....	20-7
Machine Posture and Procedures to Measure Performance .....	20-21
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-5
Related Information on Testing and Adjusting .....	30-6
Differences In Machine Monitor Symbols .....	30-6
Tools for Testing and Adjusting.....	30-7
Sketch of Tools for Testing and Adjusting .....	30-14

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$