

Shop Manual

HYDRAULIC
EXCAVATOR

PC200 -8
PC200LC-8

SERIAL NUMBERS PC200- 1001 and up
PC200LC-1001

Hybrid

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC200-8E0 (Hybrid)

PC200LC-8E0 (Hybrid)

Machine model Serial number

PC200-8E0 (Hybrid) 1001 and up

PC200LC-8E0 (Hybrid) 1001 and up

00 Index and Foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

- : New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN05221-05
00 Index and foreword	SEN05222-05
Index	SEN05223-05 ●
Foreword and general information	SEN05224-02 ●
01 Specification	SEN05225-02
Specification and technical data	SEN05226-02 ●
10 Structure, function and maintenance standard	SEN05227-03
100 Engine and cooling system	SEN05228-00
200 Hybrid Relation	SEN05229-02 ●
300 Power train	SEN05230-00
400 Undercarriage and frame	SEN05231-01
501 Hydraulic system, Part 1	SEN05232-01
502 Hydraulic system, Part 2	SEN05233-01
503 Hydraulic system, Part 3	SEN05234-02
600 Work equipment	SEN05235-00
700 Cab and its attachments	SEN05236-00
800 Electrical system	SEN05237-01
20 Standard value table	SEN05238-00
100 Standard service value table	SEN05239-00
30 Testing and adjusting	SEN05240-02
101 Testing and adjusting, Part 1	SEN05241-01
102 Testing and adjusting, Part 2	SEN05242-02 ●
103 Testing and adjusting, Part 3	SEN05243-01
40 Troubleshooting	SEN05244-04
100 Failure code table and fuse location	SEN05245-02
200 General information on troubleshooting	SEN05246-01
301 Troubleshooting by failure code, Part 1	SEN05247-00
302 Troubleshooting by failure code, Part 2	SEN05248-00
303 Troubleshooting by failure code, Part 3	SEN05249-00
304 Troubleshooting by failure code, Part 4	SEN05250-01
305 Troubleshooting by failure code, Part 5	SEN05251-03
400 Troubleshooting of electrical system (E-mode)	SEN05252-00
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN05253-00

600 Troubleshooting of engine (S-mode)	SEN05254-01
700 Troubleshooting of Hybrid system (Y-mode)	SEN05270-03 ●
50 Disassembly and assembly	SEN05255-03
100 General information on disassembly and assembly	SEN05256-01
200 Engine and cooling system	SEN05257-00
300 Hybrid Relation	SEN05258-02 ●
400 Power train	SEN05259-01
500 Undercarriage and frame	SEN05260-01
600 Hydraulic system	SEN05261-01
700 Work equipment Body	SEN05262-00
800 Cab and its attachments	SEN05263-00
900 Electric system	SEN05264-01
90 Diagrams and drawings	SEN05265-01
100 Hydraulic diagrams and drawings	SEN05266-01
200 Electrical diagrams and drawings	SEN05267-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$