

Shop Manual

HYDRAULIC
EXCAVATOR

PC200 -8

PC200LC-8

PC220 -8

PC220LC-8

SERIAL NUMBERS

PC200- 300001

PC200LC-300001

PC220- 70001

PC220LC- 70001

and up

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC200-8

PC200LC-8

PC220-8

PC220LC-8

Machine model	Serial number
---------------	---------------

PC200-8	300001 and up
PC200LC-8	300001 and up
PC220-8	70001 and up
PC220LC-8	70001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00084-26
00 Index and foreword	SEN00085-26
Index	SEN00093-26
Foreword and general information	SEN00094-06
01 Specification	SEN00086-02
Specification and technical data	SEN00095-02
10 Structure, function and maintenance standard	SEN00087-10
Engine related parts	SEN00096-01
Power train	SEN00097-02
Undercarriage and frame	SEN00098-03
Hydraulic system, Part 1	SEN00099-05
Hydraulic system, Part 2	SEN00100-06
Hydraulic system, Part 3	SEN00160-04
Work equipment	SEN00101-01
Cab and its attachments	SEN00102-01
Electrical system	SEN00103-05
20 Standard value table	SEN00088-03
Standard service value table	SEN00227-03
30 Testing and adjusting	SEN00089-10
Testing and adjusting, Part 1	SEN00228-07
Testing and adjusting, Part 2	SEN00229-07
Testing and adjusting, Part 3	SEN00230-04
40 Troubleshooting	SEN00090-11
Failure code table and fuse locations	SEN03308-02
General information on troubleshooting	SEN00231-05
Troubleshooting by failure code (Display of code), Part 1	SEN00240-08
Troubleshooting by failure code (Display of code), Part 2	SEN00241-07
Troubleshooting by failure code (Display of code), Part 3	SEN00242-06
Troubleshooting by failure code (Display of code), Part 4	SEN00243-05
Troubleshooting of electrical system (E-mode)	SEN00244-05
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00245-04
Troubleshooting of engine (S-mode)	SEN00246-02
50 Disassembly and assembly	SEN00658-12
General information on disassembly and assembly	SEN00659-07
Engine and cooling system	SEN00660-08
Power train	SEN00661-06
Undercarriage and frame	SEN00662-07

Hydraulic system	SEN00663-07
Work equipment	SEN00664-05
Cab and its attachments	SEN00665-07
Electrical system	SEN00666-08
90 Diagrams and drawings	SEN00092-11
Hydraulic diagrams and drawings	SEN00112-04
Electrical diagrams and drawings	SEN00113-10

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$