

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC228US -11***  
***PC228USLC-11***

SERIAL NUMBERS 5001 and up

**KOMATSU**



---

# 00 Index and Foreword

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-20
Foreword, Safety, Basic Information .....	00-23
How to Read the Shop Manual .....	00-23
Safety Notice for Operation .....	00-25
Precautions to Prevent Fire .....	00-33
Procedures If Fire Occurs .....	00-35
Precautions for Disposing of Waste Materials .....	00-36
Procedures for Exhaust Gas Regulations .....	00-37
Precautions for DEF .....	00-38
Store DEF .....	00-39
Precautions When You Handle Hydraulic Equipment .....	00-40
Precautions When You Disconnect and Connect Pipings .....	00-43
Precautions When You Handle Electrical Equipment .....	00-50
Precautions When You Handle Fuel System Equipment .....	00-52
Precautions When You Handle Intake System Equipment .....	00-53
Practical Use of KOMTRAX .....	00-54
Disconnect and Connect Push-Pull Type Coupler .....	00-55
Precautions for Disconnection and Connection of Connectors .....	00-59
How to Disconnect and Connect Deutsch Connector .....	00-63
How to Disconnect and Connect Slide Lock Type Connector .....	00-64
How to Disconnect and Connect Connector with Lock to Pull .....	00-66
How to Disconnect and Connect Connector with Lock to Push .....	00-67
How to Disconnect and Connect Connector with Housing to Rotate .....	00-69
How to Read the Codes for Electric Cable .....	00-70
Explanation of Terms for Maintenance Standard .....	00-74
Standard Tightening Torque Table .....	00-77
Conversion Table .....	00-84
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Working Range Drawings .....	01-6
Specifications .....	01-8
Weight Table .....	01-14
Fuel, Coolant, Lubricants (For European Union) .....	01-17
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System .....	10-6
Layout Drawing of Urea SCR System .....	10-6
Urea SCR System Diagram .....	10-11
Function of Urea SCR System .....	10-12
Component Parts of Urea SCR System .....	10-21
Boot-up System .....	10-30
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal) .....	10-30
Layout Drawing of Boot-up System (Machine with Gateway Function Controller) .....	10-32
System Operating Lamp System .....	10-34
Battery Isolator .....	10-37
Engine System .....	10-38
Layout Drawing of Engine System .....	10-38
Engine Control System .....	10-40
Auto-Deceleration System .....	10-47
Engine Automatic Warm-up System .....	10-49
Overheat Prevention System .....	10-51
Turbocharger Protection System .....	10-54
Automatic Idle Stop System .....	10-56

Component Parts of Engine System .....	10-60
Cooling System.....	10-78
Layout Drawing of Cooling System .....	10-78
Fan Speed Control System of Fan Clutch .....	10-80
Engine Output Control System of Fan Clutch.....	10-82
Component Parts of Cooling System .....	10-84
Control System .....	10-85
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-85
Layout Drawing of Control System (Machine with Gateway Function Controller) .....	10-88
Machine Monitor System.....	10-91
KomVision System.....	10-94
KOMTRAX System .....	10-98
Component Parts of Control System .....	10-100
Hydraulic System .....	10-139
Layout Drawing of Hydraulic System.....	10-139
CLSS .....	10-143
Engine and Pump Combined Control System .....	10-165
Pump and Valve Control System.....	10-171
Component Parts of Hydraulic System.....	10-174
Work Equipment System.....	10-262
Layout Drawing of Work Equipment System .....	10-262
One-Touch Power Maximizing System .....	10-267
PPC Lock System .....	10-269
Work Equipment and Travel Automatic Lock System .....	10-270
Attachment Oil Flow Adjuster System .....	10-272
Component Parts of Work Equipment System .....	10-274
Swing System .....	10-306
Layout Drawing of Swing System.....	10-306
Swing Control System Diagram .....	10-310
Component Parts of Swing System.....	10-314
Travel System .....	10-328
Layout Drawing of Travel System.....	10-328
System Diagram of Travel Control System.....	10-332
Component Parts of Travel System.....	10-334
Undercarriage and Frame .....	10-355
Layout Drawing of Undercarriage.....	10-355
Work Equipment .....	10-358
Structure of Work Equipment .....	10-358
Function of Work Equipment.....	10-359
Work Equipment Clearance Adjustment Shim.....	10-360
Bucket Clearance Adjustment Shim .....	10-361
CAB Related Parts.....	10-362
ROPS CAB .....	10-362
CAB Mount .....	10-364
CAB Tipping Stopper .....	10-365
Remove Wiring Harness Out of Cab .....	10-366
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: PC228US-11 .....	20-3
Standard Value Table for Engine: PC228USLC-11 .....	20-8
Standard Value Table for Machine.....	20-13
Standard Value Table for Machine: PC228US-11 .....	20-13
Standard Value Table for Machine: PC228USLC-11.....	20-27
Machine Posture and Procedures to Measure Performance .....	20-40
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$