

Shop Manual

HYDRAULIC
EXCAVATOR

PC700LC-8E0

SERIAL NUMBERS PC700LC-8E0 K50001 and up

KOMATSU

SHOP MANUAL

HYDRAULIC EXCAVATOR

PC700LC-8E0

Machine model	Serial number
PC700LC-8E0	K50001 and up

00 Index and foreword

Table of Contents

00 Index and foreword	1
Table of Contents.....	2
Table of Contents.....	2
Foreword and general information	12
Safety notice	12
How to read the shop manual	17
Explanation of terms for maintenance standard	19
Handling of hydraulic components.....	21
Method of disconnecting and connecting push-pull type coupler	23
Handling of electric equipment.....	26
How to read electric wire code.....	36
Precautions when performing work.....	39
Standard tightening torque table.....	42
List of abbreviation.....	46
Conversion table	50
01 Specification.....	1
Specifications.....	4
Specifications drawing	4
Working range drawings	5
Specifications.....	6
Table of weight.....	8
Table of fuel, coolant and lubricants	10
10 Structure and function.....	1
Engine and cooling system	3
Engine related parts.....	3
PTO.....	4
Cooling system	5
Power train system	6
Power train.....	6
Swing circle.....	8
Swing machinery.....	10
Final Drive.....	12
Undercarriage and frame	13
Track frame and idler cushion.....	13
Hydraulic system.....	14
Hydraulic component layout.....	14
Valve control	16
Hydraulic tank and filter	18
Hydraulic pump (piston pump)	20
Cooling fan pump.....	48
Cooling fan motor.....	56
Control valve	62
Swing motor	78
Travel motor	86
PPC valve	97
Solenoid valve.....	105
PPC shuttle valve.....	112
Boom drift prevention valve	113
Boom LOWER regeneration valve.....	117

Arm regeneration valve.....	120
Hydraulic drift prevention valve.....	123
Quick return valve.....	128
Line oil filter.....	131
Centre swivel joint.....	132
Accumulator.....	133
Electrical system.....	134
Engine control.....	134
Electrical control system.....	143
Monitor system.....	173
KOMTRAX system.....	199
Sensors.....	201
20 Standard value table	
Standard value table.....	3
Standard value table for engine.....	3
Standard value table for machine.....	4
30 Testing and adjusting	
Tool for testing, adjusting and troubleshooting.....	3
Tools for testing, adjusting, and troubleshooting.....	3
Engine and cooling system.....	7
Testing engine speed.....	7
Testing intake air pressure (boost pressure).....	9
Testing exhaust gas temperature.....	10
Testing exhaust gas color.....	11
Testing and adjusting valve clearance.....	12
Testing compression pressure.....	13
Testing blowby pressure.....	15
Testing engine oil pressure.....	16
Testing EGR valve and bypass valve drive pressure.....	17
Handling fuel system parts.....	18
Releasing remaining pressure from fuel system.....	19
Testing fuel pressure.....	20
Cylinder cut-out test mode.....	21
No-injection cranking.....	22
Testing fuel return rate and leakage.....	23
Bleeding air from fuel circuit.....	26
Testing fuel circuit for leakage.....	28
Testing and adjusting alternator belt tension.....	29
Testing and adjusting air conditioner compressor belt tension.....	30
Undercarriage and frame.....	31
Testing swing circle bearing clearance.....	31
Checking and adjusting track tension.....	32
Hydraulic system.....	33
Testing and adjusting oil pressure in work equipment, swing and travel circuits.....	33
Testing and adjusting control circuit oil pressure.....	38
Testing and adjusting control oil pressure of piston pump.....	40
Testing servo piston movement.....	46
Testing PPC valve output pressure.....	48
Testing output pressure of solenoid valve and PPC shuttle valve.....	52
Adjusting play of work equipment and swing PPC valves.....	58
Isolating the parts causing hydraulic drift in work equipment.....	59
Testing and adjusting travel deviation.....	60

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$