

Shop Manual

HYDRAULIC
EXCAVATOR

PC78US-8

SERIAL NUMBERS 15001 and up

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC78US-8

Machine model **Serial number**
PC78US-8 15001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title.....	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04543-17
00 Index and foreword	SEN04544-17
100 Index	SEN04552-17 ●
200 Foreword and general information	SEN04553-03 ●
01 Specification	SEN04545-01
100 Specification and technical data.....	SEN04554-01
10 Structure, function and maintenance standard.....	SEN04546-05
100 Engine and cooling system	SEN04555-01
200 Power train.....	SEN04556-00
300 Undercarriage and frame	SEN04557-00
401 Hydraulic system, Part 1	SEN04558-00
402 Hydraulic system, Part 2	SEN04559-00
403 Hydraulic system, Part 3	SEN04560-02
500 Work equipment.....	SEN04561-00
600 Cab and its attachments	SEN04562-01
700 Electrical system	SEN04563-03
20 Standard value table.....	SEN04547-01
100 Standard service value table	SEN04803-01
30 Testing and adjusting	SEN04548-06
101 Testing and adjusting, Part 1.....	SEN04804-05
102 Testing and adjusting, Part 2.....	SEN04805-03
103 Testing and adjusting, Part 3.....	SEN04806-00
40 Troubleshooting.....	SEN04549-05
100 Failure code table and fuse locations	SEN04807-02
200 General information on troubleshooting.....	SEN04808-01
301 Troubleshooting by failure code, Part 1	SEN04809-00
302 Troubleshooting by failure code, Part 2	SEN04810-02
303 Troubleshooting by failure code, Part 3	SEN04811-02 ●
304 Troubleshooting by failure code, Part 4	SEN04812-00
400 Troubleshooting of electrical system (E-mode).....	SEN04813-00

500 Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN04814-00
600 Troubleshooting of engine (S-mode).....	SEN04815-00
50 Disassembly and assembly	SEN04550-10
100 General information on disassembly and assembly.....	SEN04833-01
200 Engine and cooling system	SEN04834-04
300 Power train	SEN04835-05
400 Undercarriage and frame	SEN04836-05
500 Hydraulic system	SEN04837-05
600 Work equipment	SEN04838-02
700 Cab and its attachments.....	SEN04839-04 ●
800 Electrical system	SEN04840-05
90 Diagrams and drawings.....	SEN04551-02
100 Hydraulic diagrams and drawings	SEN04564-00
200 Electrical diagrams and drawings.....	SEN04565-02

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$