

Shop Manual

WHEEL LOADER

WA150-6

SERIAL NUMBERS 80001 and up

ecot3

KOMATSU

WHEEL LOADER

WA150-6

Machine model **Serial number**
WA150-6 **80001 and up**

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title.....	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04884-06
00 Index and foreword	SEN04888-06
100 Index	SEN04896-06
200 Foreword and general information	SEN04897-01
01 Specification	SEN04889-00
100 Specification and technical data.....	SEN04898-00
10 Structure, function and maintenance standard.....	SEN04890-01
100 Engine and cooling system	SEN04899-00
200 Power train.....	SEN04900-00
300 Steering system	SEN04901-00
400 Brake system	SEN04902-00
500 Undercarriage and frame.....	SEN04903-01
600 Hydraulic system.....	SEN04904-00
700 Work equipment.....	SEN04905-00
800 Cab and its attachments	SEN04906-00
901 Electrical system, Part 1	SEN04907-00
902 Electrical system, Part 2	SEN04908-00
20 Standard value table.....	SEN04891-00
100 Standard service value table.....	SEN04936-00
30 Testing and adjusting	SEN04892-02
101 Testing and adjusting, Part 1.....	SEN04937-01
102 Testing and adjusting, Part 2.....	SEN04938-01
103 Testing and adjusting, Part 3.....	SEN04939-01
40 Troubleshooting.....	SEN04893-00
100 Failure code table and fuse locations	SEN04940-00
200 General information on troubleshooting.....	SEN04941-00
301 Troubleshooting by failure code (Display of code), Part 1	SEN04942-00
302 Troubleshooting by failure code (Display of code), Part 2	SEN04943-00
303 Troubleshooting by failure code (Display of code), Part 3	SEN04944-00
304 Troubleshooting by failure code (Display of code), Part 4	SEN04945-00
305 Troubleshooting by failure code (Display of code), Part 5	SEN04946-00
306 Troubleshooting by failure code (Display of code), Part 6	SEN04947-00
307 Troubleshooting by failure code (Display of code), Part 7	SEN04948-00
400 Troubleshooting of electrical system (E-mode).....	SEN04949-00
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04950-00
600 Troubleshooting of engine (S-mode).....	SEN04951-00
50 Disassembly and assembly.....	SEN04894-02
100 General information on disassembly and assembly	SEN05158-01
200 Engine and cooling system	SEN05159-00

300 Power train	SEN05160-02
400 Undercarriage and frame	SEN05161-01
500 Hydraulic system	SEN05162-00
600 Work equipment	SEN05163-00
700 Cab and its attachments.....	SEN05164-00
800 Electrical system	SEN05165-00
80 Appendix.....	SEN05042-00
100 Air conditioner	SEN05043-00
90 Diagrams and drawings.....	SEN04895-00
100 Hydraulic diagrams and drawings	SEN04909-00
200 Electrical diagrams and drawings.....	SEN04910-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$