

Shop Manual

WHEEL LOADER

WA380-6

SERIAL NUMBERS 65001 and up

ecot3

KOMATSU

WHEEL LOADER

WA380-6

Machine model	Serial number
WA380-6	65001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents.....	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00114-15
00 Index and foreword	SEN00115-15
Index	SEN00123-15 ●
Foreword and general information	SEN00124-04
01 Specification	SEN00116-03
Specification and technical data	SEN00125-03
10 Structure, function and maintenance standard	SEN00117-06
Engine and cooling system	SEN01028-03
Power train	SEN01029-02
Steering system	SEN01030-03
Brake system	SEN01031-04
Undercarriage and frame	SEN01032-01
Hydraulic system, Part 1	SEN01033-04
Hydraulic system, Part 2	SEN01034-02
Work equipment	SEN01035-02
Cab and its attachments	SEN01036-04
Electrical system, Part 1 SEN01037-02	
Electrical system, Part 2	SEN01038-03
Electrical system, Part 3	SEN01039-03
20 Standard value table	SEN00118-01
Standard service value table	SEN01244-01
30 Testing and adjusting	SEN00119-05
Testing and adjusting, Part 1	SEN01245-02
Testing and adjusting, Part 2	SEN01246-03
Testing and adjusting, Part 3	SEN01247-04
40 Troubleshooting	SEN00120-06
Failure code table and fuse locations	SEN03961-04 ●
General information on troubleshooting	SEN01261-02
Troubleshooting by failure code (Display of code), Part 1	SEN01248-04 ●
Troubleshooting by failure code (Display of code), Part 2	SEN01249-03
Troubleshooting by failure code (Display of code), Part 3	SEN01250-05

Troubleshooting by failure code (Display of code), Part 4	SEN01251-02
Troubleshooting by failure code (Display of code), Part 5	SEN01252-03
Troubleshooting by failure code (Display of code), Part 6	SEN01253-05
Troubleshooting by failure code (Display of code), Part 7	SEN01254-01
Troubleshooting by failure code (Display of code), Part 8	SEN01255-03
Troubleshooting by failure code (Display of code), Part 9	SEN01256-02
Troubleshooting by failure code (Display of code), Part 10	SEN01257-02
Troubleshooting of electrical system (E-mode)	SEN01258-03
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01259-03
Troubleshooting of engine (S-mode)	SEN01260-02
50 Disassembly and assembly	SEN00121-04
General information on disassembly and assembly	SEN01451-03
Engine and cooling system	SEN01452-03
Power train	SEN01453-03
Steering system	SEN01454-02
Brake system	SEN01455-03
Undercarriage and frame	SEN01456-01
Hydraulic system	SEN01457-01
Work equipment	SEN01458-01
Cab and its attachments	SEN01459-03
Electrical system	SEN01460-01
90 Diagrams and drawings	SEN00122-05
Hydraulic diagrams and drawings	SEN00126-01
Electrical diagrams and drawings	SEN00127-04

Table of contents

00 Index and foreword	
Index	SEN00123-15
Composition of shop manual	2
Table of contents.....	4
Foreword and general information	SEN00124-04
Safety notice	2
How to read the shop manual.....	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code.....	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table.....	32
Conversion table.....	36
01 Specification	
Specification and technical data	SEN00125-03
Specification dimension drawing.....	3
Specifications.....	4
Weight table	8
Table of fuel, coolant and lubricants	10
10 Structure, function and maintenance standard	
Engine and cooling system	SEN01028-03
Engine mount and transmission mount	2
Cooling system	3
Cooling fan pump.....	4
Cooling fan motor	12
Power train	SEN01029-02
Power train.....	3
Power train system diagram	4
Drive shaft.....	6
Power train piping diagram	7
Torque converter	8
Transmission.....	16
Flow control valve	33
Valve assembly	34
ECMV	35
Main relief valve and torque converter relief valve	42
Axle.....	44
Differential.....	46
Limited slip differential	51
Final drive	58
Steering system	SEN01030-03
Steering piping diagram	3
Steering column.....	4
Steering pump.....	5
Steering valve	17
Orbit-roll valve.....	32
Stop valve	40
Steering relief valve	41
Steering cylinder	42
Emergency steering motor.....	44
Emergency steering pump.....	45

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$