

# Shop Manual

WHEEL LOADER

**WA470-7**

SERIAL NUMBERS 10001 and up

**KOMATSU**



---

## **00 Index and foreword**

---

# Index

00 Index and foreword .....	00-1
Foreword, safety and general information .....	00-19
Important safety notice .....	00-19
How to read the shop manual .....	00-26
Explanation of terms for maintenance standard .....	00-28
Handling equipment of fuel system devices .....	00-30
Handling of intake system parts .....	00-31
Handling of hydraulic equipment .....	00-32
Method of disconnecting and connecting of push-pull type coupler .....	00-34
Handling of electrical equipment .....	00-37
How to read electric wire code .....	00-45
Precautions when performing operation .....	00-48
Practical use of KOMTRAX .....	00-53
Standard tightening torque table .....	00-54
List of abbreviation .....	00-60
Conversion table .....	00-65
01 Specification .....	01-1
Table of contents .....	01-2
Specifications .....	01-3
Specification drawing .....	01-3
Specifications .....	01-5
Weight table .....	01-10
Table of fuel, coolant, and lubricants .....	01-12
10 Structure and function .....	10-1
Table of contents .....	10-2
Engine and cooling system .....	10-4
Engine related parts .....	10-4
KVG T .....	10-6
EGR system piping drawing .....	10-12
EGR system circuit diagram .....	10-14
EGR valve .....	10-15
EGR cooler .....	10-17
KCCV layout drawing .....	10-19
KCCV ventilator .....	10-21
KDPF .....	10-23
Cooling system .....	10-27
Cooling fan pump .....	10-30
Cooling fan motor .....	10-39
Power train .....	10-46
Power train system .....	10-46
Drive shaft .....	10-49
Power train piping drawing .....	10-50
Transmission control .....	10-51
Torque converter .....	10-54
Transmission .....	10-59
Transmission control valve .....	10-78
Forward and reverse clutch ECMV and 1st and 2nd clutch ECMV .....	10-81
3rd, 4th clutch ECMV .....	10-88
Lockup clutch ECMV .....	10-95
Main relief and torque converter relief valve .....	10-99
Axle .....	10-101
Differential .....	10-103
Final drive .....	10-113
Steering system .....	10-115
Layout of steering parts .....	10-115
Steering column .....	10-116

Joystick steering lever linkage.....	10-117
Steering pump.....	10-118
Steering valve.....	10-130
Orbit-roll valve.....	10-144
Stop valve.....	10-150
Emergency steering motor.....	10-151
Emergency steering pump.....	10-152
Brake system.....	10-153
Layout of brake parts.....	10-153
Charge valve.....	10-155
Brake valve.....	10-161
Slack adjuster.....	10-165
Accumulator (for brake).....	10-168
Brake.....	10-169
Parking brake control.....	10-172
Parking brake.....	10-173
Parking brake solenoid valve.....	10-174
Parking brake emergency release valve.....	10-177
Undercarriage and frame.....	10-178
Axle mount and center hinge pin.....	10-178
Tire.....	10-179
Hydraulic system.....	10-181
Hydraulic component layout.....	10-181
Work equipment control.....	10-183
Hydraulic tank.....	10-185
Double type gear pump.....	10-188
Work equipment pump.....	10-189
Control valve.....	10-210
CLSS.....	10-219
Hydraulic circuit diagram and names of valves.....	10-223
Accumulator charge valve.....	10-234
Work equipment lock solenoid valve.....	10-238
Accumulator (for PPC circuit).....	10-239
Accumulator (for ECSS).....	10-240
Work equipment.....	10-241
Work equipment linkage.....	10-241
Bucket.....	10-242
Bucket positioner and boom positioner.....	10-243
Cab and its attachments.....	10-244
ROPS cab.....	10-244
Electrical system.....	10-245
Engine control system.....	10-245
Preheating system.....	10-247
Engine power mode selector circuit.....	10-249
Engine output limit function.....	10-250
Automatic warm-up function.....	10-251
Parking brake control system.....	10-252
System operating lamp function.....	10-254
Battery disconnect switch function.....	10-256
Transmission controller system.....	10-258
Work equipment control system.....	10-283
Machine monitor system.....	10-302
Rear view monitor system.....	10-325
KOMTRAX system.....	10-328
System component parts.....	10-331
Sensor.....	10-362
20 STANDARD VALUE TABLE.....	20-1
Table of contents.....	20-2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$