

# Shop Manual

ENGINE

**4TNV84T-B**



# TABLE OF CONTENTS

---

	<b>Page</b>
<b>INTRODUCTION</b> .....	1-1
<b>SAFETY</b> .....	3-1
<b>GENERAL SERVICE INFORMATION</b> .....	4-1
<b>PERIODIC MAINTENANCE</b> .....	5-1
<b>ENGINE</b> .....	6-1
<b>FUEL SYSTEM</b> .....	7-1
<b>COOLING SYSTEM</b> .....	8-1
<b>LUBRICATION SYSTEM</b> .....	9-1
<b>TURBOCHARGER</b> .....	10-1
<b>STARTER MOTOR</b> .....	11-1
<b>ALTERNATOR</b> .....	12-1
<b>ELECTRONIC CONTROL SYSTEM</b> .....	13-1
<b>ELECTRIC WIRING</b> .....	14-1
<b>FAILURE DIAGNOSIS</b> .....	15-1

**This Page Intentionally Left Blank**

## Section 1

# INTRODUCTION

---

This *Service Manual* describes the service procedures for the TNV series direct injection engines. These engines are certified by the U.S. EPA, California ARB and/or the 97/68/EC Directive for industrial use.

Please use this manual for accurate, quick and safe servicing of the engine. Since the directions in this manual are for a typical engine, some specifications and components may be different from your engine. Refer to the documentation supplied by the optional equipment manufacturer for specific service instructions.

Komatsu products are continuously undergoing improvement. This *Service Manual* might not address possible field modifications to the equipment. Contact an authorized Komatsu dealer or distributor for answers to any questions relating to field modifications.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$