

# Shop Manual

BULLDOZER

**D37EXi -24**  
**D37PXi -24**  
**D39EXi -24**  
**D39PXi -24**

SERIAL NUMBERS

D37EXi-85001  
D37PXi-85001  
D39EXi-95001  
D39PXi-95001  
and up

**KOMATSU**



---

## **00 Index and Foreword**

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-21
Foreword, Safety, Basic Information.....	00-27
How to Read the Shop Manual .....	00-27
Safety Notice for Operation .....	00-29
Precautions to Prevent Fire.....	00-37
Procedures If Fire Occurs .....	00-39
Precautions When You Discard Waste Materials.....	00-40
Procedures for Exhaust Gas Regulations.....	00-41
Precautions for DEF.....	00-42
Store DEF .....	00-43
Precautions When You Handle Hydraulic Equipment.....	00-44
Precautions When You Disconnect and Connect Pipings.....	00-47
Precautions When You Handle Electrical Equipment .....	00-54
Precautions When You Handle Fuel System Equipment .....	00-56
Precautions When You Handle Intake System Equipment .....	00-57
Practical Use of KOMTRAX .....	00-58
Disconnect and Connect Push-Pull Type Coupler .....	00-59
Precautions for Disconnection and Connection of Connectors .....	00-63
Disconnect and Connect Deutsch Connector .....	00-67
How to Disconnect and Connect Slide Lock Type Connector .....	00-68
Disconnect and Connect Connector with Lock to Pull .....	00-70
Disconnect and Connect Connector with Lock to Push .....	00-71
Disconnect and Connect Connector with Housing to Rotate .....	00-73
How to Read the Codes for Electric Cable .....	00-74
Explanation of Terms for Maintenance Standard .....	00-78
Standard Tightening Torque Table.....	00-81
Conversion Table .....	00-88
01 Specification.....	01-1
Table of Contents .....	01-2
Abbreviation List .....	01-3
Specifications .....	01-9
Specification Drawing.....	01-9
Specifications.....	01-15
Weight Table .....	01-38
Table of Fuel, Coolant, and Lubricants .....	01-49
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Abbreviation List .....	10-6
Urea SCR System.....	10-12
Layout Drawing of Urea SCR System .....	10-12
Urea SCR System Diagram .....	10-14
Function of Urea SCR System .....	10-15
Component Parts of Urea SCR System .....	10-31
Boot-up System .....	10-40
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal) .....	10-40
Layout Drawing of Boot-up System (Machine with Gateway Function Controller) .....	10-41
System Operating Lamp System.....	10-42
Battery Disconnect Switch.....	10-45
Engine System.....	10-46
Layout Drawing of Engine System .....	10-46
Engine Control System .....	10-48
Automatic Idle Stop System .....	10-60
Component Parts of Engine System .....	10-64
Cooling System.....	10-85
Layout Drawing of Cooling System .....	10-85

Cooling Fan Control System .....	10-87
Component Parts of Cooling System .....	10-90
Control System .....	10-100
Layout Drawing of Control System (Machine with KOMTRAX Terminal) .....	10-100
Layout Drawing of Control System (Machine with Gateway Function Controller) .....	10-101
Machine Monitor System.....	10-102
KOMTRAX System .....	10-104
Component Parts of Control System .....	10-106
Hydraulic System .....	10-143
Layout Drawing of Hydraulic System.....	10-143
CLSS .....	10-144
Component Parts of Hydraulic System.....	10-147
Power Train System.....	10-181
Layout Drawing of HST System .....	10-181
Operation of HST System .....	10-182
Steering and Brake Control System .....	10-184
HST Control System .....	10-186
Parking Brake Control System .....	10-199
Component Parts of Power Train System.....	10-202
Work Equipment System.....	10-239
Work Equipment Control .....	10-239
Layout Drawing of Front Work Equipment.....	10-243
Layout Drawing of Fixed Multi-Shank Ripper .....	10-244
Component Parts of Work Equipment System .....	10-245
ICT System .....	10-263
Layout Drawing of ICT System.....	10-263
System Diagram of ICT Control System.....	10-265
Blade Control System .....	10-267
Smooth Start System .....	10-276
Slip Control System.....	10-279
Assist Control System .....	10-282
HST Speed Range Control System.....	10-285
Component Parts of ICT System.....	10-288
Undercarriage and Frame .....	10-311
Main Frame.....	10-311
Track Frame and Idler Cushion .....	10-312
Work Equipment .....	10-316
Structure of Front Work Equipment .....	10-316
Structure of Fixed Multi-Shank Ripper .....	10-317
CAB Related Parts .....	10-318
ROPS CAB .....	10-318
CAB Mount .....	10-321
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Abbreviation List .....	20-3
Standard Value Table for Engine .....	20-9
Standard Value Table for Engine: D37EXI-24.....	20-9
Standard Value Table for Engine: D37PXi-24.....	20-12
Standard Value Table for Engine: D39EXI-24.....	20-15
Standard Value Table for Engine: D39PXi-24.....	20-18
Standard Value Table for Machine.....	20-21
Standard Value Table for Machine: D37EXI-24 .....	20-21
Standard Value Table for Machine: D37PXi-24 .....	20-38
Standard Value Table for Machine: D39EXI-24 .....	20-53
Standard Value Table for Machine: D39PXi-24 .....	20-70
Machine Posture and Procedures to Measure Performance .....	20-85
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$