

# Shop Manual

BULLDOZER

**D475A -5EO**  
**D475ASD -5EO**

SERIAL NUMBERS

D475A- 30001 and up  
D475ASD- 30001

**KOMATSU**



**BULLDOZER**

**D475A-5E0  
D475ASD-5E0**

**Machine model      Serial number**

**D475A-5E0            30001 and up  
D475ASD-5E0          30001 and up**

---

## **00 Index and foreword**

### **Index**

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs .....	SEN00203-34
00 Index and foreword .....	SEN00204-34
Index .....	SEN00205-34
Foreword and general information .....	SEN00206-06
01 Specification.....	SEN00207-01
Specification and technical data.....	SEN00208-01
10 Structure, function and maintenance standard .....	SEN00209-06
Engine and cooling system .....	SEN00210-00
Power train, Part 1 .....	SEN00211-01
Power train, Part 2 .....	SEN00212-03
Undercarriage and frame .....	SEN00213-03
Hydraulic system, Part 1 .....	SEN00214-00
Hydraulic system, Part 2 .....	SEN00215-01
Hydraulic system, Part 3 .....	SEN00216-01
Work equipment.....	SEN00217-01
Cab and its attachments .....	SEN00218-00
Electrical system .....	SEN00219-03
20 Standard value table .....	SEN00220-01
Standard service value table .....	SEN01816-01
30 Testing and adjusting .....	SEN00221-09
Testing and adjusting, Part 1.....	SEN01817-03
Testing and adjusting, Part 2.....	SEN01818-04
Testing and adjusting, Part 3.....	SEN01819-07
Testing and adjusting, Part 4.....	SEN01820-04
40 Troubleshooting .....	SEN00222-08
Failure code table and fuse locations .....	SEN01821-04
General information on troubleshooting.....	SEN01822-03
Troubleshooting by failure code, Part 1 .....	SEN01823-03
Troubleshooting by failure code, Part 2 .....	SEN01824-01
Troubleshooting by failure code, Part 3 .....	SEN01825-03
Troubleshooting by failure code, Part 4 .....	SEN01826-01
Troubleshooting by failure code, Part 5 .....	SEN01827-04
Troubleshooting by failure code, Part 6 .....	SEN01828-04
Troubleshooting by failure code (Display of code), Part 7 .....	SEN01829-03
Troubleshooting by failure code (Display of code), Part 8 .....	SEN01830-01
Troubleshooting of electrical system (E-mode).....	SEN01831-03
Troubleshooting of hydraulic and mechanical system (H-mode) .....	SEN01832-02
Troubleshooting of engine (S-mode).....	SEN01833-01

50 Disassembly and assembly .....	SEN00223-23
General information on disassembly and assembly .....	SEN02013-11
Engine and cooling system (SAA12V140E-3) .....	SEN02014-04
Engine (SAA12V140E-3) .....	SEN02338-06
Power train, Part 1 .....	SEN02015-05
Power train, Part 2 .....	SEN02016-08
Undercarriage and frame, Part 1 .....	SEN02017-11
Undercarriage and frame, Part 2 .....	SEN02018-07
Hydraulic system .....	SEN02019-06
Work equipment.....	SEN02020-03
Cab and its attachments .....	SEN02021-04
Electrical system.....	SEN02339-05
90 Diagrams and drawings .....	SEN00224-06
Hydraulic diagrams and drawings.....	SEN00225-00
Electrical diagrams and drawings .....	SEN00226-06

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$