

# Shop Manual

BULLDOZER

***D51EXi-24***  
***D51PXi-24***

SERIAL NUMBERS    D51EXi-10001    and up  
                                 D51PXi-10001



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-20
FOREWORD, SAFETY, BASIC INFORMATION .....	00-26
HOW TO READ THE SHOP MANUAL .....	00-26
SAFETY NOTICE FOR OPERATION .....	00-28
PRECAUTIONS TO PREVENT FIRE .....	00-36
ACTIONS IF FIRE OCCURS .....	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-40
PRECAUTIONS FOR DEF .....	00-41
STORE AdBlue/DEF .....	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-56
PRACTICAL USE OF KOMTRAX .....	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE .....	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-77
STANDARD TIGHTENING TORQUE TABLE .....	00-80
CONVERSION TABLE .....	00-87
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
SPECIFICATIONS .....	01-13
WEIGHT TABLE .....	01-24
FUEL, COOLANT, LUBRICANTS (FOR NORTH AMERICA) .....	01-28
FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION) .....	01-30
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-5
UREA SCR SYSTEM .....	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-11
UREA SCR SYSTEM DIAGRAM .....	10-13
FUNCTION OF UREA SCR SYSTEM .....	10-14
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-31
BOOT-UP SYSTEM .....	10-40
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-40
SYSTEM OPERATING LAMP SYSTEM .....	10-41
BATTERY DISCONNECT SWITCH .....	10-43
ENGINE SYSTEM .....	10-44
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-44
ENGINE CONTROL SYSTEM .....	10-46
AUTOMATIC IDLE STOP SYSTEM .....	10-52
COMPONENT PARTS OF ENGINE SYSTEM .....	10-55
COOLING SYSTEM .....	10-72

LAYOUT DRAWING OF COOLING SYSTEM .....	10-72
COOLING FAN CONTROL SYSTEM.....	10-74
COMPONENT PARTS OF COOLING SYSTEM.....	10-77
CONTROL SYSTEM.....	10-86
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-86
MACHINE MONITOR SYSTEM .....	10-87
KOMTRAX SYSTEM.....	10-88
COMPONENT PARTS OF CONTROL SYSTEM.....	10-89
HYDRAULIC SYSTEM.....	10-121
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-121
CLSS .....	10-122
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-125
POWER TRAIN SYSTEM .....	10-157
LAYOUT DRAWING OF HST SYSTEM .....	10-157
OPERATION OF HST SYSTEM.....	10-158
STEERING AND BRAKE CONTROL SYSTEM .....	10-160
HST CONTROL SYSTEM.....	10-162
PARKING BRAKE CONTROL SYSTEM .....	10-173
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-176
WORK EQUIPMENT SYSTEM .....	10-212
WORK EQUIPMENT CONTROL .....	10-212
LAYOUT DRAWING OF FRONT WORK EQUIPMENT .....	10-214
LAYOUT OF FIXED MULTI-SHANK RIPPER.....	10-215
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-216
ICT SYSTEM .....	10-232
LAYOUT DRAWING OF ICT SYSTEM.....	10-232
ICT CONTROL SYSTEM DIAGRAM.....	10-234
BLADE CONTROL SYSTEM .....	10-236
SMOOTH START SYSTEM .....	10-242
SLIP CONTROL SYSTEM .....	10-244
ASSIST CONTROL SYSTEM .....	10-245
HST SPEED RANGE CONTROL SYSTEM .....	10-247
COMPONENT PARTS OF ICT SYSTEM .....	10-249
UNDERCARRIAGE AND FRAME.....	10-272
MAIN FRAME .....	10-272
SUSPENSION .....	10-273
TRACK FRAME AND IDLER CUSHION .....	10-276
WORK EQUIPMENT.....	10-278
STRUCTURE OF FRONT WORK EQUIPMENT.....	10-278
STRUCTURE OF FIXED MULTI-SHANK RIPPER.....	10-279
CAB AND ITS ATTACHMENTS .....	10-280
ROPS CAB .....	10-280
CAB MOUNT .....	10-282
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: D51EXI-24 .....	20-9
STANDARD VALUE TABLE FOR ENGINE: D51PXI-24 .....	20-13
STANDARD VALUE TABLE FOR MACHINE.....	20-17
STANDARD VALUE TABLE FOR MACHINE: D51EXI-24 .....	20-17
STANDARD VALUE TABLE FOR MACHINE: D51PXI-24 .....	20-34
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE .....	20-49
30 TESTING AND ADJUSTING.....	30-1
CONTENTS .....	30-2
ABBREVIATION LIST .....	30-6
RELATED INFORMATION ON TESTING AND ADJUSTING .....	30-12
TOOLS FOR TESTING AND ADJUSTING.....	30-12

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$