

Shop Manual

BULLDOZER

**D51EXi -24
D51PXi-24**

SERIAL NUMBERS

D51EXi-10001
D51PXi-10001

and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-20
Foreword, Safety, Basic Information.....	00-26
How to Read the Shop Manual	00-26
Safety Notice for Operation	00-28
Precautions to Prevent Fire.....	00-36
Procedures If Fire Occurs	00-38
Precautions When You Discard Waste Materials.....	00-39
Procedures for Exhaust Gas Regulations.....	00-40
Precautions for DEF.....	00-41
Store DEF	00-42
Precautions When You Handle Hydraulic Equipment.....	00-43
Precautions When You Disconnect and Connect Pipings.....	00-46
Precautions When You Handle Electrical Equipment	00-53
Precautions When You Handle Fuel System Equipment	00-55
Precautions When You Handle Intake System Equipment	00-56
Practical Use of KOMTRAX	00-57
Disconnect and Connect Push-Pull Type Coupler	00-58
Precautions for Disconnection and Connection of Connectors	00-62
Disconnect and Connect Deutsch Connector	00-66
How to Disconnect and Connect Slide Lock Type Connector	00-67
Disconnect and Connect Connector with Lock to Pull	00-69
Disconnect and Connect Connector with Lock to Push	00-70
Disconnect and Connect Connector with Housing to Rotate	00-72
How to Read the Codes for Electric Cable	00-73
Explanation of Terms for Maintenance Standard	00-77
Standard Tightening Torque Table.....	00-80
Conversion Table	00-87
01 Specification.....	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing.....	01-9
Specifications.....	01-13
Weight Table	01-24
Fuel, Coolant, Lubricants (For North America)	01-28
Fuel, Coolant, Lubricants (For European Union)	01-30
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-6
Urea SCR System.....	10-12
Layout Drawing of Urea SCR System	10-12
Urea SCR System Diagram	10-14
Function of Urea SCR System	10-15
Component Parts of Urea SCR System	10-32
Boot-up System	10-41
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal)	10-41
Layout Drawing of Boot-up System (Machine with Gateway Function Controller)	10-42
System Operating Lamp System.....	10-43
Battery Disconnect Switch.....	10-46
Engine System.....	10-47
Layout Drawing of Engine System	10-47
Engine Control System	10-49
Automatic Idle Stop System	10-61
Component Parts of Engine System	10-65
Cooling System.....	10-82

Layout Drawing of Cooling System	10-82
Cooling Fan Control System	10-84
Component Parts of Cooling System	10-87
Control System	10-96
Layout Drawing of Control System (Machine with KOMTRAX Terminal)	10-96
Layout Drawing of Control System (Machine with Gateway Function Controller)	10-97
Machine Monitor System.....	10-98
KOMTRAX System	10-100
Component Parts of Control System	10-102
Hydraulic System	10-139
Layout Drawing of Hydraulic System.....	10-139
CLSS	10-140
Component Parts of Hydraulic System.....	10-143
Power Train System	10-175
Layout Drawing of HST System	10-175
Operation of HST System	10-176
Steering and Brake Control System	10-178
HST Control System	10-180
Parking Brake Control System	10-191
Component Parts of Power Train System.....	10-194
Work Equipment System.....	10-230
Work Equipment Control	10-230
Layout Drawing of Front Work Equipment.....	10-232
Layout Drawing of Fixed Multi-Shank Ripper	10-233
Component Parts of Work Equipment System	10-234
ICT System	10-250
Layout Drawing of ICT System.....	10-250
System Diagram of ICT Control System.....	10-252
Blade Control System	10-254
Smooth Start System	10-260
Slip Control System.....	10-262
Assist Control System	10-263
HST Speed Range Control System.....	10-265
Component Parts of ICT System.....	10-267
Undercarriage and Frame	10-290
Main Frame.....	10-290
Suspension	10-291
Track Frame and Idler Cushion	10-294
Work Equipment	10-296
Structure of Front Work Equipment.....	10-296
Structure of Fixed Multi-Shank Ripper	10-297
CAB Related Parts	10-298
ROPS CAB	10-298
CAB Mount	10-301
20 Standard Value Table	20-1
Table of Contents	20-2
Abbreviation List	20-3
Standard Value Table for Engine	20-9
Standard Value Table for Engine: D51EXI-24.....	20-9
Standard Value Table for Engine: D51PXi-24.....	20-13
Standard Value Table for Machine.....	20-17
Standard Value Table for Machine: D51EXI-24	20-17
Standard Value Table for Machine: D51PXi-24	20-34
Machine Posture and Procedures to Measure Performance	20-49
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-6
Abbreviation List	30-7

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$