

# Shop Manual

BULLDOZER

**D51EXi -24  
D51PXi-24**

SERIAL NUMBERS

D51EXi-15001  
D51PXi-15001

and up

**KOMATSU**



---

## **00 Index and Foreword**

---

# Index

00 Index and Foreword .....	00-1
Foreword, Safety, Basic Information .....	00-21
How to Read the Shop Manual .....	00-21
Safety Notice for Operation .....	00-23
Precautions to Prevent Fire .....	00-31
Procedures If Fire Occurs .....	00-33
Precautions for Disposing of Waste Materials .....	00-34
Procedures for Exhaust Gas Regulations .....	00-35
Precautions for DEF .....	00-36
Store DEF .....	00-37
Precautions When You Handle Hydraulic Equipment .....	00-38
Precautions When You Disconnect and Connect Pipings .....	00-41
Precautions When You Handle Electrical Equipment .....	00-48
Precautions When You Handle Fuel System Equipment .....	00-50
Precautions When You Handle Intake System Equipment .....	00-51
Practical Use of KOMTRAX .....	00-52
Disconnect and Connect Push-Pull Type Coupler .....	00-53
Precautions for Disconnection and Connection of Connectors .....	00-57
How to Disconnect and Connect Deutsch Connector .....	00-61
How to Disconnect and Connect Slide Lock Type Connector .....	00-62
How to Disconnect and Connect Connector with Lock to Pull .....	00-64
How to Disconnect and Connect Connector with Lock to Push .....	00-65
How to Disconnect and Connect Connector with Housing to Rotate .....	00-67
How to Read the Codes for Electric Cable .....	00-68
Explanation of Terms for Maintenance Standard .....	00-72
Standard Tightening Torque Table .....	00-75
Conversion Table .....	00-82
Abbreviation List .....	00-87
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Specifications .....	01-7
Weight Table .....	01-18
Fuel, Coolant, Lubricant .....	01-22
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System .....	10-6
Layout Drawing of Urea SCR System .....	10-6
Urea SCR System Diagram .....	10-8
Function of Urea SCR System .....	10-9
Component Parts of Urea SCR System .....	10-26
Boot-up System .....	10-35
Layout Drawing of Boot-up System .....	10-35
System Operating Lamp System .....	10-36
Battery Disconnect Switch .....	10-38
Engine System .....	10-39
Layout Drawing of Engine System .....	10-39
Engine Control System .....	10-41
Automatic Idle Stop System .....	10-47
Component Parts of Engine System .....	10-50
Cooling System .....	10-68
Layout Drawing of Cooling System .....	10-68
Cooling Fan Control System .....	10-70
Component Parts of Cooling System .....	10-73
Control System .....	10-82

Layout Drawing of Control System .....	10-82
Machine Monitor System.....	10-83
KOMTRAX System .....	10-84
Component Parts of Control System .....	10-85
Hydraulic System .....	10-122
Layout Drawing of Hydraulic System.....	10-122
CLSS .....	10-123
Component Parts of Hydraulic System.....	10-126
Power Train System .....	10-158
Layout Drawing of HST System .....	10-158
Operation of HST System .....	10-159
Steering and Brake Control System .....	10-161
HST Control System .....	10-163
Parking Brake Control System .....	10-174
Component Parts of Power Train System.....	10-177
Work Equipment System.....	10-213
Work Equipment Control .....	10-213
Layout Drawing of Front Work Equipment.....	10-215
Layout Drawing of Fixed Multi-Shank Ripper .....	10-216
Component Parts of Work Equipment System .....	10-217
ICT System .....	10-233
Layout Drawing of ICT System.....	10-233
System Diagram of ICT Control System.....	10-235
Blade Control System .....	10-237
Assist Control System .....	10-242
Back Grade Mode System .....	10-244
Cut Control System .....	10-246
Smooth Start System .....	10-259
Slip Control System.....	10-261
Speed Control System .....	10-263
Straight Travel Correction System.....	10-265
Quick Surface Control System .....	10-269
System of Triangulated Surface from AS-BUILT.....	10-271
2 Surfaces Selection Control System .....	10-273
Lift Layer Control System.....	10-275
2D Laser Machine Control System.....	10-278
Component Parts of ICT System.....	10-280
Undercarriage and Frame .....	10-306
Main Frame.....	10-306
Suspension .....	10-307
Track Frame and Idler Cushion .....	10-310
Work Equipment .....	10-312
Structure of Front Work Equipment (Serial No.: 15001 to 15600).....	10-312
Structure of Front Work Equipment (Serial No.: 15601 and up).....	10-313
Structure of Fixed Multi-Shank Ripper.....	10-314
CAB Related Parts .....	10-315
ROPS CAB .....	10-315
CAB Mount .....	10-317
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: D51EXI-24.....	20-3
Standard Value Table for Engine: D51PXi-24.....	20-7
Standard Value Table for Machine.....	20-11
Standard Value Table for Machine: D51EXI-24 .....	20-11
Standard Value Table for Machine: D51PXi-24 .....	20-28
Machine Posture and Procedures to Measure Performance .....	20-43
30 Testing and Adjusting .....	30-1

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$